

## **SAFETY GUIDE**

	Page
Safety Symbol Guide	2
Approvals and Notice	3
Warranty	4
Important Safety Instructions	5
Cautions	5
Warnings	6

# USER GUIDE

## Safety Symbol Guide

For your own safety and to avoid invalidation of the warranty all text marked with these symbols should be read carefully.



**CAUTIONS**  
Must be followed carefully to avoid bodily injury.



**WARNINGS**  
Must be observed to avoid damage to your equipment.



**NOTES**  
Contain important information and useful tips on the operation of your equipment.



**IMPORTANT**  
Please read this manual carefully before  
connecting your mixer to the mains for the first  
time.



This equipment complies  
with the EMC directive  
89/336/EEC  
and LVD 73/23/EEC  
and 93/68/EEC  
Environment: E1-E4  
This product is approved to  
safety standards:

**Product Part Nos:**

<b>E6:</b> RW5650	EN/IEC 60065: 2001
<b>E8:</b> RW5651	UL6500 2nd Edition: 2000
<b>E12:</b> RW5652	CAN/CSA-E60065-00

**For further details contact:**

Harman International Industries Ltd.  
Cranborne House, Cranborne Road  
Potters Bar, Hertfordshire, EN6 3JN, UK

Tel: +44 (0) 1707 665000  
Fax: +44 (0) 1707 660742  
e-mail: info@soundcraft.com

© Harman International Industries Ltd. 2002  
All rights reserved

Parts of the design of this product may be protected by worldwide patents.

Part No. ZM0261  
Issue:4

Soundcraft is a trading division of Harman International Industries Ltd. Information in this manual is subject to change without notice and does not represent a commitment on the part of the vendor. Soundcraft shall not be liable for any loss or damage whatsoever arising from the use of information or any error contained in this manual.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, electrical, mechanical, optical, chemical, including photocopying and recording, for any purpose without the express written permission of Soundcraft.



Harman International Industries Limited  
Cranborne House  
Cranborne Road  
POTTERS BAR  
Hertfordshire  
EN6 3JN  
UK

Tel: +44 (0)1707 665000  
Fax: +44 (0)1707 660742  
<http://www.soundcraft.com>

# USER GUIDE



## Warranty

- 1 Soundcraft is a trading division of Harman International Industries Ltd .  
End User means the person who first puts the equipment into regular operation.  
Dealer means the person other than Soundcraft (if any) from whom the End User purchased the Equipment, provided such a person is authorised for this purpose by Soundcraft or its accredited Distributor.  
Equipment means the equipment supplied with this manual.
- 2 If within the period of twelve months from the date of delivery of the Equipment to the End User it shall prove defective by reason only of faulty materials and/or workmanship to such an extent that the effectiveness and/or usability thereof is materially affected the Equipment or the defective component should be returned to the Dealer or to Soundcraft and subject to the following conditions the Dealer or Soundcraft will repair or replace the defective components. Any components replaced will become the property of Soundcraft.
- 3 Any Equipment or component returned will be at the risk of the End User whilst in transit (both to and from the Dealer or Soundcraft) and postage must be prepaid.
- 4 This warranty shall only be valid if:
  - a) the Equipment has been properly installed in accordance with instructions contained in Soundcraft's manual; and
  - b) the End User has notified Soundcraft or the Dealer within 14 days of the defect appearing; and
  - c) no persons other than authorised representatives of Soundcraft or the Dealer have effected any replacement of parts maintenance adjustments or repairs to the Equipment; and
  - d) the End User has used the Equipment only for such purposes as Soundcraft recommends, with only such operating supplies as meet Soundcraft's specifications and otherwise in all respects in accordance with Soundcraft's recommendations.
- 5 Defects arising as a result of the following are not covered by this Warranty: faulty or negligent handling, chemical or electro-chemical or electrical influences, accidental damage, Acts of God, neglect, deficiency in electrical power, air-conditioning or humidity control.
- 6 The benefit of this Warranty may not be assigned by the End User.
- 7 End Users who are consumers should note their rights under this Warranty are in addition to and do not affect any other rights to which they may be entitled against the seller of the Equipment.



## IMPORTANT SAFETY INSTRUCTIONS


### CAUTIONS

- To avoid the risk of fire, replace the mains fuse only with the correct type and value fuse, as marked on the bottom of the product.
- ATTENTION: - Afin de réduire le risque de feu remplacer seulement avec fusible de même type.
- MAINS VOLTAGE SELECTION  
This setting is NOT User Adjustable.  
The units are capable of operating at either 230V AC or 115V AC mains voltages  $\pm 10\%$ .
- REPLACING MAINS FUSE  
Remove the mains lead from the connector. Use a small screwdriver to unscrew the fuse carrier from its location to the left of the mains power connector. Check the fuse is of the correct type and value and replace if necessary; also check that the voltage selection as marked on the rear panel is correct for the mains supply level before switching the unit ON again.  
If the mains fuse fails repeatedly this may be because an electrical safety hazard exists. The unit must be taken out of service and referred to the Soundcraft dealer from where the equipment was purchased.
- THIS UNIT MUST BE EARTHED  
Under no circumstances should the mains earth be disconnected from the mains lead.
- ATTENTION: - Cet appareil doit être branché à la terre.

The wires in the mains lead are coloured in accordance with the following code:  
Replacement Part No: FJ8016 (UK) : FJ8017 (EU) : FJ8018 (US & CAN)

	UK & EU	US & CAN
Earth / Ground:	Green and Yellow	Green and Yellow
Neutral:	Blue	White
Live:	Brown	Black

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Green and Yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth / ground symbol: 


The wire which is coloured Blue or White must be connected to the terminal in the plug which is marked with the letter N.

The wire which is coloured Brown or Black must be connected to the terminal in the plug which is marked with the letter L.

Ensure that these colour codings are followed carefully in the event of the plug being changed.

- Do not install near any heat sources such as radiators, heat resistors, stoves, or other apparatus (including amplifiers) that produce heat.

# USER GUIDE

- Do not use this apparatus near water. The apparatus must not be exposed to dripping or splashing. Objects containing liquid must not be placed on the apparatus.
- The disconnect device is the mains plug or the appliance connector: either one must remain accessible so as to be readily operable in use.
- Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- Only use cables and hardware specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way such as power-supply cord or plug is damaged., liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
- It is recommended that all maintenance and service on the product should be carried out by Soundcraft or its authorised agents. Soundcraft cannot accept any liability whatsoever for any loss or damage caused by service, maintenance or repair by unauthorised personnel.
-  If a trolley is used, use caution when moving the trolley / apparatus combination to avoid injury from tip-over.



AVIS: RISQUE DE CHOC ELECTRIQUE  
- NE PAS OUVRIR



## WARNINGS


- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- This unit contains no user serviceable parts. Refer all servicing to a qualified service engineer, through the appropriate Soundcraft dealer.
- Clean the apparatus only with a dry cloth.
- DO NOT block any of the ventilation openings. DO NOT install where air cannot flow over the rear of the unit. DO Install in accordance with the manufacturers instructions.

**CONTENTS**

	Page
Overview	8
The 10 Second Tutor	9
Introduction	10
Advice for Those Who Push the Boundaries	10
Installation & Safety Precautions	11
Wiring Up	12
Mono Input Channels	16
Stereo Input Channels	19
Master Section	21
Using Your Spirit E Series Console	23
Fitting Rackmount Ears	25
Application 1 Live Sound Reinforcement	26
Application 2 Multispeaker Applications	27
Application 3 Places of Worship	27
Application 4 Recording	28
Application 5 Linking Two Spirit E Series Consoles	28
Glossary	29
Typical Specifications	31
Dimensions	33
Typical Connecting Leads	36
System Block Diagram	38
Control Position Markup Sheets	39

# USER GUIDE

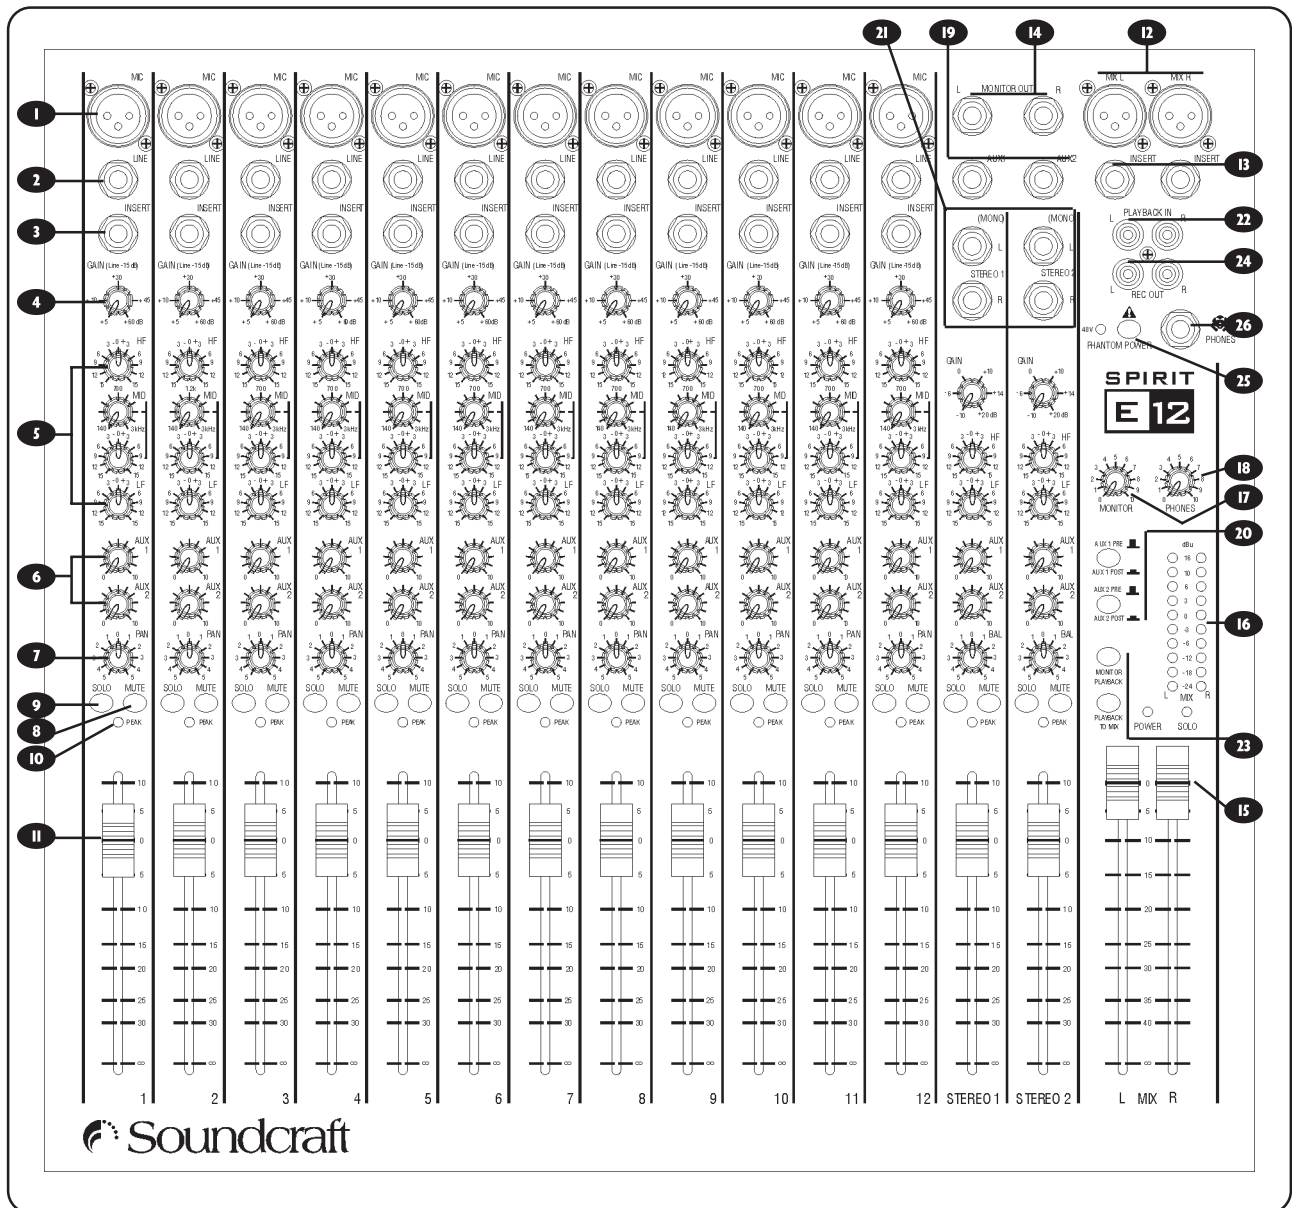

## Overview



To get you working as fast as possible, this manual begins with a 10 second tutorial. Here you can find quick information on any feature of the console, and a page reference where you can find a more detailed explanation.



## THE 10 SECOND TUTOR

- 1 MIC INPUT (XLR)**  Connect Microphones here. If you are using a condenser mic, ensure phantom power is supplied by pressing the switch at the top of the master section **25**  
**WARNING:** Do Not apply Phantom Power before connecting a microphone
- 2 LINE INPUT (1/4" Jack)** Connect Line level sources here, e.g. Synth, Drum Machine, DI etc
- 3 INSERT POINT (1/4" Jack)** Connect Signal processors here, e.g. Compressor, Gate etc
- 4 GAIN CONTROL** Adjust this to increase or decrease the level of the incoming signal
- 5 EQ STAGE** Adjust these controls to change the signal tone (the character of the signal)
- 6 AUX SENDS** Adjust these controls to change the level of the signal to an FX unit or an artist's monitors (headphones/in-ear/stage monitors). Aux 1&2 are switchable pre/post fade
- 7 PAN CONTROL** Use this control to position the signal within the stereo field
- 8 MUTE SWITCH** When this is pressed you will hear no signal from the channel (post-mute signals)
- 9 SOLO** When pressed the signal will appear on the monitor outputs - use this to monitor the post EQ signal from the channel
- 10 PEAK LED** This is used to indicate that the signal close to distorting (clipping) on a specific channel
- 11 INPUT CHANNEL FADER** This is used to control the level fed to the Mix Bus and post-fade sends
- 12 MIX OUTPUTS (XLR)** Connect these to your analogue recording device, or to your amplification system
- 13 MIX INSERTS (1/4" Jack)** This is a pre-fade break in the signal path which can be used to feed a dynamics or mastering device. The signal is sent from the tip of the jack plug and the return path comes back in on the ring of the jack plug
- 14 MONITOR O/Ps (1/4" Jack)** These are used to feed your monitoring system. This can be directly connected to powered monitors, or indirectly via an amplifier to standard monitors
- 15 MASTER FADERS** These faders control the overall level of the mix bus
- 16 MAIN METERS** These show the level of the mix outputs. When the SOLO LED is lit, the meters show the level of the signal sourced
- 17 MONITOR CONTROL** This controls the level of the signal sent to your monitoring system
- 18 PHONES CONTROL** This controls the level of the signal sent to the headphones jack socket
- 19 AUX OUTPUTS (1/4" Jack)** These two outputs can be used to send the channel signal to an FX unit or an artist's monitors (headphones/in-ear/stage monitors). Aux 1&2 are switchable pre/post fade
- 20 AUX CONTROLS** These two switches globally switch the AUX1 and AUX2 feeds respectively, on all the input modules to be either pre or post-fade
- 21 STEREO INPUTS (1/4" Jack)** These two inputs can be used to connect line level stereo inputs from keyboards, sound modules, samplers, computer based audio cards etc. These inputs pass through a normal channel strip, with EQ, Auxes and a Balance control
- 22 PLAYBACK INPUTS (RCA Phono)** Here you can connect the playback from your recording device
- 23 PLAYBACK CONTROLS** Use these to control the playback signal. The MONITOR PLAYBACK switch sends the signal to the monitor outputs and phones, whilst the PLAYBACK TO MIX switch sends it to the main mix
- 24 RECORD OUTPUTS** Here you can connect the input to your recording device
- 25 PHANTOM POWER**  Press this to switch the phantom power (48V) on for condenser microphones  
**WARNING:** Do Not apply Phantom Power before connecting a microphone
- 26 HEADPHONES (1/4" Jack)** Plug your headphones into this socket

# USER GUIDE

## INTRODUCTION

Thank you for purchasing a Soundcraft mixer. We take great pride in our latest addition to the Spirit range of mixing consoles - you have taken a step in the right direction and should never look back.

The packaging which your Spirit E Series arrived in, forms part of the product and must be retained for future use.

Owning a Soundcraft console brings you the expertise and support of one of the industry's leading manufacturers, and the results of nearly 3 decades of supporting some of the biggest names in the business. Our knowledge has been attained through working in close contact with leading professionals and institutes to bring you products designed to get the best possible results from your mixing.

Built to the highest standards using quality components and surface mount technology, the Spirit E Series is designed to be as easy to use as possible. We have spent years researching the most efficient methods of control for two key reasons:

- 1) Engineers, musicians, writers and programmers all need to have very few interruptions to the creative process; our products have been designed to be almost transparent, allowing this process to breathe.
- 2) Whether performing or recording, time is a very expensive and rare commodity. Our products have a user interface which is recognised by millions to be the industry standard because of its efficiency.

The sonic qualities of our products are exemplary - some of the same circuits which are used on our most expensive consoles are employed in the Spirit E Series, bringing you the great Soundcraft quality in a small format console without compromise.

You will also be glad to know you have a one year warranty with your product from the date of purchase. The Spirit E Series has been designed using the latest high-end software based engineering packages. Every console from Soundcraft has been proven to stand up to all the stress and rigours of modern day mixing environments.

The entire Spirit E Series is manufactured using some of the most advanced techniques in the world, from high density surface mount PCB technology, to computer aided test equipment able to measure signals well outside the range of normal hearing. As each console passes through to be quality checked before packing, there is also a human listening station. Something we have learnt over the years is that the human touch counts - and only by using people can you ensure the product meets the high demands of the user.



## ADVICE FOR THOSE WHO PUSH THE BOUNDARIES

Although your new console will not make any noise until you feed it signals, it has the capability to produce sounds which when monitored through an amplifier or headphones can damage hearing over time.

Please take care when working with your audio - if you are manipulating controls which you don't understand (which we all do when we are learning), make sure your monitors are turned down. Remember that your ears are the most important tool of your trade, look after them, and they will look after you.

Most importantly - don't be afraid to experiment to find out how each parameter affects the sound - this will extend your creativity and help you to get the best from your mixer and the most respect from your artists and audience.

## INSTALLATION AND SAFETY PRECAUTIONS



### ABOUT THIS MANUAL

This manual describes the safety precautions, warnings, specifications, installation and operating procedures specific to the following Soundcraft products only:

Spirit E6                    RW5650 UK / EU / US

Spirit E8                    RW5651 UK / EU / US

Spirit E12                  RW5652 UK / EU / US

The information in this manual should be read by end users of one of the above products only. In particular, this manual should not be read in conjunction with any other product not listed above.

The above products do not contain any user-serviceable parts and the user guide does not contain any technical servicing information. Qualified service personnel can obtain a separate Technical Manual incorporating the user guide, Part No ZM0262 from Soundcraft or one of its accredited distributors.

Information in this manual is subject to change without notice and does not represent a commitment on the part of the vendor. Soundcraft shall not be liable for any loss or damage whatsoever arising from the use of information or any error contained in this manual.

### INSTALLING THE MIXER

Correct connection and positioning of your mixer is important for successful and trouble-free operation. The following sections are intended to give guidance with cabling, connections and configuration of your mixer.

- Choose the mains supply for the sound system with care, and do not share sockets or earthing with lighting dimmers.
- Position the mixer where the sound can be heard clearly.
- Run audio cables separately from dimmer wiring, using balanced lines wherever possible. If necessary, cross audio and lighting cables at right angles to minimise the possibility of interference. Keep unbalanced cabling as short as possible.
- Check your cables regularly and label each end for easy identification.



### SAFETY PRECAUTIONS

For your own safety and to avoid invalidation of the warranty please read this section carefully. In particular, you should also read the Cautions and Warnings on pages 5-6 of this manual.

**The console must only be connected to the Mains Voltage indicated on the rear panel.**

**To avoid the risk of fire, replace the mains fuse only with the correct value fuse, as indicated on the rear panel.**

### General Precautions

Do not obstruct any of the ventilation openings.

Avoid storing or using the mixer in conditions of excessive heat or cold, or in positions where it is likely to be subject to vibration, dust or moisture.

Keep the mixer clean using a soft dry brush, and an occasional wipe with a damp cloth or ethyl alcohol. Do not use any other solvents which may cause damage to paint or plastic parts.


Avoid placing drinks or smoking materials on or near the mixer. Sticky drinks and cigarette ash are frequent causes of damage to faders and switches.

Regular care and inspection will be rewarded by a long life and maximum reliability.


# USER GUIDE

## INPUTS


### Balanced Mic XLR

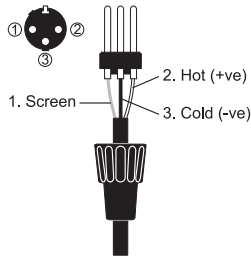


### Unbalanced Mic XLR

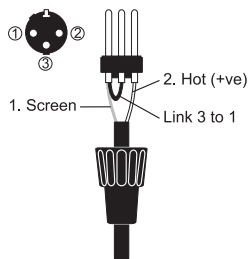

### 3 pole jack 2 pole jack Balanced Unbalanced

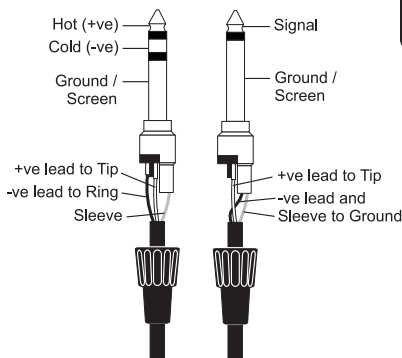

### Inserts

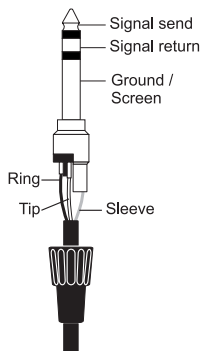

## WIRING UP

Please refer to pages 36/37 for additional wiring details.

### Mic Input

The MIC input accepts XLR-type connectors and is designed to suit a wide range of BALANCED or UNBALANCED low-level signals, whether from delicate vocals requiring the best low-noise performance, or drum kits needing maximum headroom. Professional dynamic, condenser or ribbon mics are best because these will be LOW IMPEDANCE. While you can use low-cost HIGH IMPEDANCE mics, you do not get the same degree of immunity to interference on the microphone cable and as a result the level of background noise may be higher. If you turn the PHANTOM POWER on, the socket provides a suitable powering voltage for professional condenser mics.



**DO NOT use UNBALANCED sources with the phantom power switched on. The voltage on pins 2 & 3 of the XLR connector may cause serious damage. BALANCED dynamic mics may normally be used with phantom power switched on (contact your microphone manufacturer for guidance)**

The input level is set using the input GAIN knob.

The LINE input offers the same gain range as the MIC input, but at a higher input impedance, and is 20dB less sensitive. This is suitable for most line level sources.



### WARNING !

**Start with the input GAIN knob turned fully anticlockwise when plugging high level sources into the LINE input to avoid overloading the input channel or giving you a very loud surprise!**

### Line Input

Accepts 3-pole 'A' gauge jacks, or 2-pole mono jacks which will automatically ground the 'cold' input. Use this input for sources other than mics, such as keyboards, drum machines, synths, tape machines or guitars. The input is BALANCED for low noise and immunity from interference, but you can use UNBALANCED sources by wiring up the jacks as shown, although you should then keep cable lengths as short as possible to minimise interference pick-up on the cable. Note that the ring must be grounded if the source is unbalanced. Set the input level using the GAIN knob, starting with the knob turned fully anticlockwise. Unplug any MIC connection when using the LINE input.

### Insert Point


The unbalanced, pre-EQ insert point is a break in the channel signal path, allowing limiters, compressors, special EQ or other signal processing units to be added in the signal path. The Insert is a 3-pole 'A' gauge jack socket which is normally bypassed. When a jack is inserted, the signal path is broken, just before the EQ section.

The signal from the channel appears on the TIP of the plug and is returned on the RING, with the sleeve as a common ground.


The Send may be tapped off as an alternative pre-fade, pre-EQ direct output if required, using a lead with tip and ring shorted together so that the signal path is not interrupted.

## OUTPUTS


### Mix Outputs

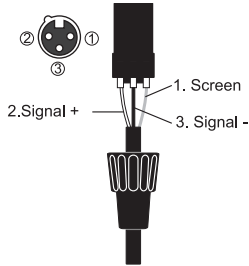


### Aux Outputs Monitor Outputs

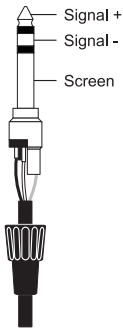

### Mix Inserts

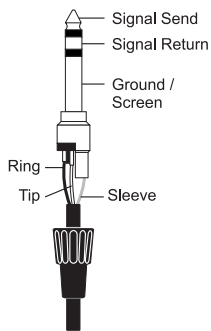

### Headphones

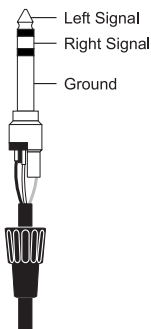


## Stereo Inputs STEREO 1/2

These accept 3-pole 'A' gauge jacks, or 2-pole mono jacks which will automatically ground the 'cold' input. Use these inputs for sources such as keyboards, drum machines, synths, tape machines or as returns from processing units. The input is BALANCED for low noise and immunity from interference, but you can use UNBALANCED sources by wiring up the jacks as shown, although you should then keep cable lengths as short as possible to minimise interference pick-up on the cable. Note that the ring must be grounded if the source is unbalanced. Mono sources can be fed to both paths by plugging into the Left jack only.


## Mix Inserts

The unbalanced, pre-fade Mix insert point is a break in the output signal path to allow the connection of, for example, a compressor/limiter or graphic equaliser. The Insert is a 3-pole 'A' gauge jack socket which is normally bypassed. When a jack is inserted, the signal path is broken, just before the mix fader. The mix signal appears on the TIP of the plug and is returned on the RING. A 'Y' lead may be required to connect to equipment with separate send and return jacks as shown below:

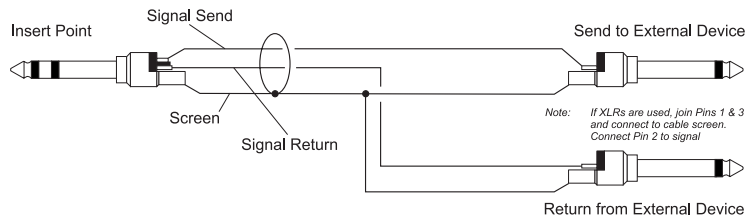

## Mix Outputs


The MIX outputs are on XLR's, wired as shown, and incorporate impedance balancing, allowing long cable runs to balanced amplifiers and other equipment.

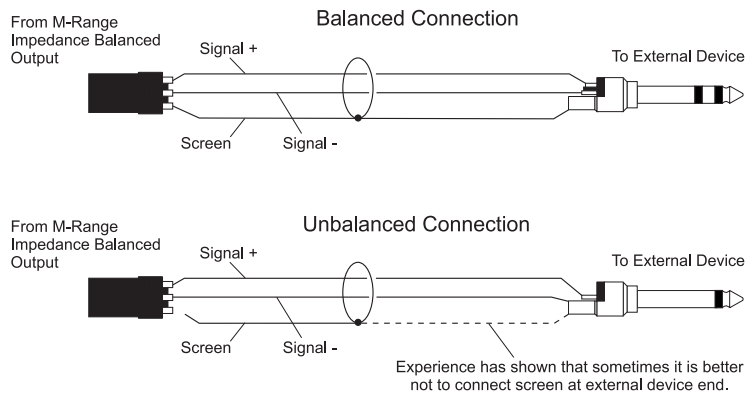


# USER GUIDE

## OUTPUTS


### Mix Outputs

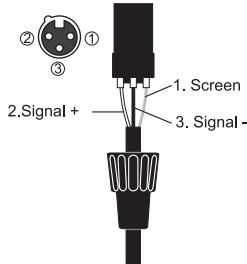


### Aux Outputs Monitor Outputs

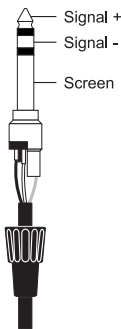

### Mix Inserts

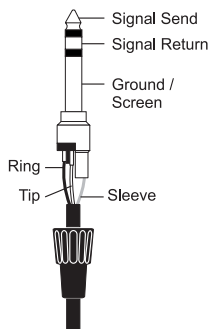

### Headphones

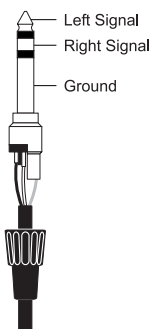

## Aux Outputs

The Aux outputs are on 3-pole 'A' gauge jack sockets, wired as shown on the left, and are balanced, allowing long cable runs to balanced amplifiers and other equipment.

## Headphones

The PHONES output is a 3-pole 'A' gauge jack, wired as a stereo output as shown, ideally for headphones of 200Ω or greater. 8Ω headphones are not recommended.

## Polarity (Phase)

You will probably be familiar with the concept of polarity in electrical signals and this is of particular importance to balanced audio signals. Just as a balanced signal is highly effective at cancelling out unwanted interference, so two microphones picking up the same signal can cancel out, or cause serious degradation of the signal if one of the cables has the +ve and -ve wires reversed. This phase reversal can be a real problem when microphones are close together and you should therefore always take care to connect pins correctly when wiring audio cables.

## Grounding and Shielding


For optimum performance use balanced connections where possible and ensure that all signals are referenced to a solid, noise-free earthing point and that all signal cables have their screens connected to ground. In some unusual circumstances, to avoid earth or ground 'loops' ensure that all cable screens and other signal earths are connected to ground only at their source and not at both ends.

If the use of unbalanced connections is unavoidable, you can minimise noise by following these wiring guidelines:


- On INPUTS, unbalance at the source and use a twin screened cable as though it were balanced.
- On OUTPUTS, connect the signal to the +ve output pin, and the ground of the output device to -ve. If a twin screened cable is used, connect the screen only at the mixer end.
- Avoid running audio cables or placing audio equipment close to thyristor dimmer units or power cables.
- Noise immunity is improved significantly by the use of low impedance sources, such as good quality professional microphones or the outputs from most modern audio equipment. Avoid cheaper high impedance microphones, which may suffer from interference over long cable runs, even with well-made cables.

Grounding and shielding is still seen as a black art, and the suggestions above are only guidelines. If your system still hums, an earth/ground loop is the most likely cause. Two examples of how an earth loop can occur are shown below.

Example 1

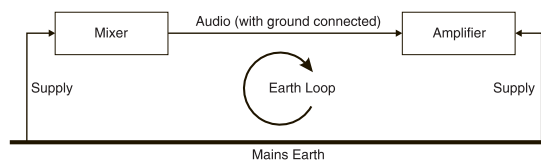

Example 2

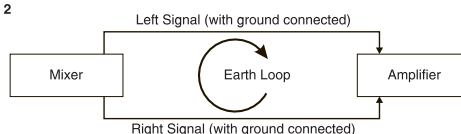

**WARNING! Under NO circumstances must the AC power mains earth be disconnected from the mains lead.**

## PROBLEM SOLVING

Basic problem solving is within the scope of any user if a few basic rules are followed.


- Get to know the Block Diagram of your console (see page 38).
- Get to know what all parameters and/or connections in the system are supposed to do.
- Learn where to look for common trouble spots.

The Block Diagram is a representative sketch of all the components of the console, showing how they connect together and how the signal flows through the system. Once you have become familiar with the various component blocks you will find the Block Diagram is quite easy to follow and you will have gained a valuable understanding of the internal structure of the console.

Each Component has a specific function and only by getting to know what each part is supposed to do will you be able to tell if there is a genuine fault! Many “faults” are the result of incorrect connection or control settings which may have been overlooked.

Basic Troubleshooting is a process of applying logical thought to the signal path through the console and tracking down the problem by elimination.

- Swap input connections to check that the source is really present. Check both Mic and Line inputs.
- Eliminate sections of the channel by using the insert point to re-route the signal to other inputs that are known to be working.
- Route channels to different outputs or to auxiliary sends to identify problems on the Master section.
- Compare a suspect channel with an adjacent channel which has been set up identically. Use SOLO to monitor the signal in each section.
- Insert contact problems may be checked by using an insert bypass jack with tip and ring shorted together as shown below. If the signal appears when the jack is inserted it shows that there is a problem with the normalising contacts on the jack socket, caused by wear or damage, or often just dirt or dust. Keep a few in your gig tool box.



Insert Bypass Jack

If in doubt please contact Soundcraft customer support.



## PRODUCTS UNDER WARRANTY

USA customers should contact the National Service Manager at Soundcraft USA, telephone: (615) 360-0458, e-mail: [soundcraft-usa@harman.com](mailto:soundcraft-usa@harman.com).

UK customers should contact their local Dealer.

Outside the UK and USA, customers are requested to contact their territorial distributor who is able to offer support in the local time zone and language.

Please see the Distributor listings on our website (<http://www.soundcraft.com>) to locate your Local Distributor.


## OUT-OF-WARRANTY PRODUCTS

For out-of-warranty consoles purchased in the United Kingdom, please contact the Customer Services Department (e-mail: [csd@soundcraft.com](mailto:csd@soundcraft.com)) at the factory in Potters Bar, Hertfordshire: Telephone +44 (0)1707 665000.

For all other out-of-warranty consoles, please contact the appropriate territorial distributor.

When mailing or faxing please remember to give as much information as possible. This should include your name, address and a daytime telephone number. Should you experience any difficulty please contact Customer Services Department (e-mail: [csd@soundcraft.com](mailto:csd@soundcraft.com))

# USER GUIDE

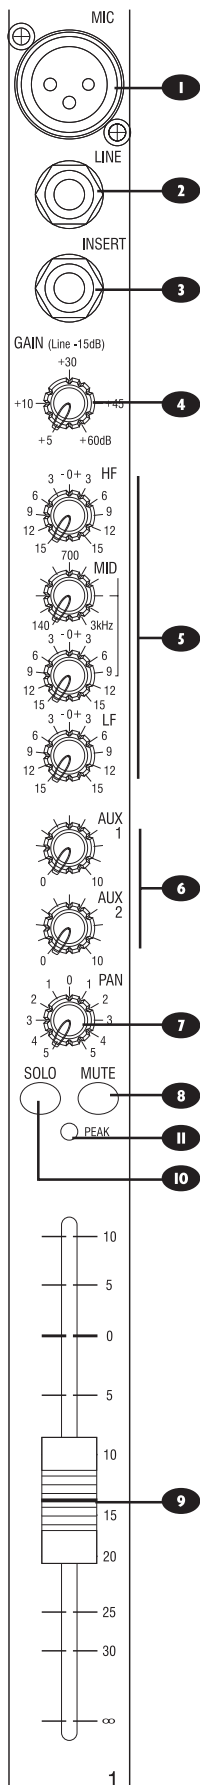

## Mono Input Channel

### 1 Mic Input

The MIC input accepts XLR-type connectors and is designed to suit a wide range of BALANCED or UNBALANCED signals. Professional dynamic, condenser or ribbon mics are best because these will be LOW IMPEDANCE. You can use low-cost HIGH IMPEDANCE mics, but the level of background noise will be higher. If you turn the PHANTOM POWER on (top right-hand side of the mixer) the socket provides a suitable powering voltage for professional condenser mics.



**ONLY connect condenser microphones with the +48V powering OFF, and ONLY turn the +48V powering on or off with all output faders DOWN, to prevent damage to the mixer or external devices.**


TAKE CARE when using unbalanced sources, which may be damaged by the phantom power voltage on pins 2 & 3 of the XLR connector. Unplug any mics if you want to use the LINE Input. The input level is set using the GAIN knob.

### 2 Line Input

Accepts 3-pole 'A' gauge (TRS) jacks. Use this input for sources other than mics, such as keyboards, drum machines, synths, tape machines or DI'd guitars. The input is BALANCED for low noise and top quality from professional equipment, but you can use UNBALANCED sources by wiring up the jacks as shown below, although you should then keep cable lengths as short as possible. Unplug anything in the MIC input if you want to use this socket. Set the input level using the GAIN knob.

### 3 Insert Point

The unbalanced, pre-EQ insert point is a break in the channel signal path, allowing limiters, compressors, special EQ or other signal processing units to be added in the signal path. The Insert is a 3-pole 'A' gauge jack socket which is normally bypassed. When a jack is inserted, the signal path is broken, just before the EQ section. The Send may be tapped off as an alternative pre-fade, pre-EQ direct output if required, using a lead with tip and ring shorted together so that the signal path is not interrupted (see below).

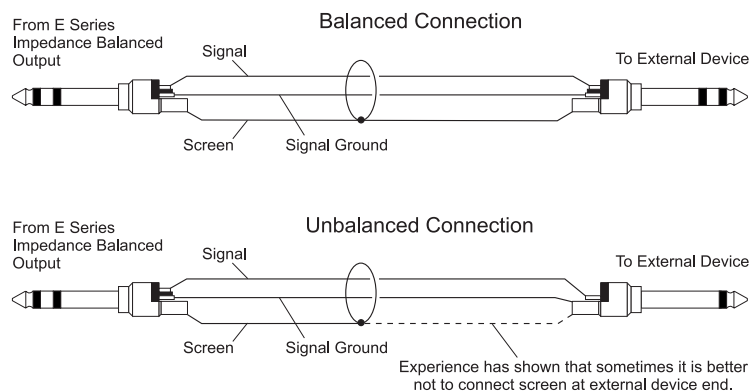



## 4 Gain

This knob sets how much of the source signal is sent to the rest of the mixer. Too high, and the signal will distort as it overloads the channel. Too low, and the level of any background hiss will be more noticeable and you may not be able to get enough signal level to the output of the mixer.

Note that some sound equipment, particularly that intended for domestic use, operates at a lower level (-10dBV) than professional equipment and will therefore need a higher gain setting to give the same output level.

See “Initial Setup” on page 23 to learn how to set GAIN correctly.

## 5 Equaliser

The Equaliser (EQ) allows fine manipulation of the sound, particularly to improve the sound in live PA applications where the original signal is often far from ideal and where slight boosting or cutting of particular voice frequencies can really make a difference to clarity. There are three sections giving the sort of control usually only found on much larger mixers. The EQ knobs can have a dramatic effect, so use them sparingly and listen carefully as you change any settings so that you get to know how they affect the sound.

### HF EQ




Turn to the right to boost high (treble) frequencies above 12kHz by up to 15dB, adding crispness to cymbals, vocals and electronic instruments. Turn to the left to cut by up to 15dB, reducing hiss or excessive sibilance which can occur with certain types of microphone. Set the knob in the centre-detented position when not required.

### MID EQ

There are two knobs which work together to form a SWEPT MID EQ. The lower knob provides 15dB of boost and cut, just like the HF EQ knob, but the frequency at which this occurs can be set by the upper knob over a range of 140Hz to 3kHz. This allows some truly creative improvement of the signal in live situations, because this mid band covers the range of most vocals. Listen carefully as you use these controls together to find how particular characteristics of a vocal signal can be enhanced or reduced. Set the lower knob to the centre-detented position when not required.

### LF EQ

Turn to the right to boost low (bass) frequencies below 60Hz by up to 15dB, adding warmth to vocals or extra punch to synths, guitars and drums. Turn to the left to cut low frequencies by up to 15dB for reducing hum, stage rumble or to improve a mushy sound. Set the knob to the centre-detented position when not required.

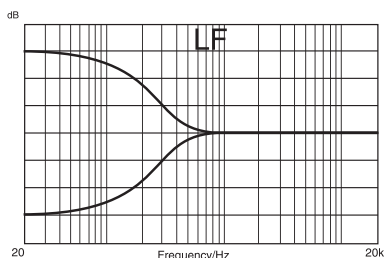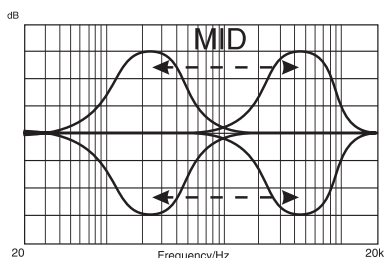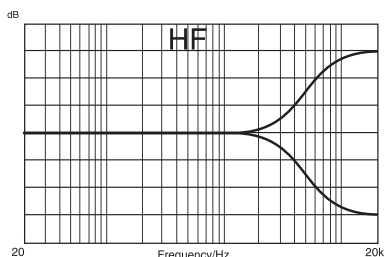

## 6 Aux Sends


These are used to set up separate mixes for FOLDBACK, EFFECTS or recording, and the combination of each Aux Send is mixed to the respective Aux Output. For Effects it is useful for the signal to fade up and down with the fader (this is called POST-FADE), but for Foldback or Monitor feeds it is important for the send to be independent of the fader (this is called PRE-FADE).

AUX SENDS 1 and 2 are both globally switchable between pre and post-fade (see master section on page 21/22).

## 7 PAN

This control sets the amount of the channel signal feeding the Left and Right MIX buses, allowing you to move the source smoothly across the stereo image. When the control is turned fully left or right you are able to route the signal at unity gain to either left or right outputs individually.

# USER GUIDE

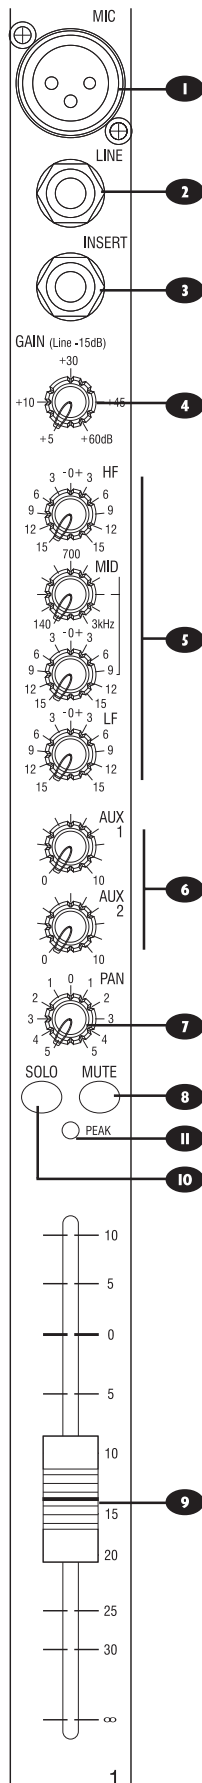

## 8 MUTE

All outputs from the channel except inserts are on when the MUTE switch is released and muted when the switch is down, allowing levels to be pre-set before the signal is required.

## 9 INPUT CHANNEL FADER

The 100mm FADER, with a custom-designed law to give even smoother control of the overall signal level in the channel strip, allows precise balancing of the various source signals being mixed to the Master Section. You get most control when the input GAIN is set up correctly, giving full travel on the fader. See the "Initial Setup" section on page 23 for help in setting a suitable signal level.


## 10 SOLO

When the latching SOLO switch is pressed, the pre-fade pre-mute signal is fed to the headphones, control room output and meters, where it replaces the MIX. The SOLO LED on the Master section illuminates to warn that a SOLO is active. This is a useful way of listening to any required input signal without interrupting the main mix, for making adjustments or tracing problems. When SOLO is pressed anywhere on the console, the Control Room outputs automatically switch from monitoring the Mix Outputs.

## II PEAK LED

This LED will light when the signal level approaches clipping at any of the three monitored points:

- a) PRE-EQ
- b) POST-EQ
- c) POST-FADE

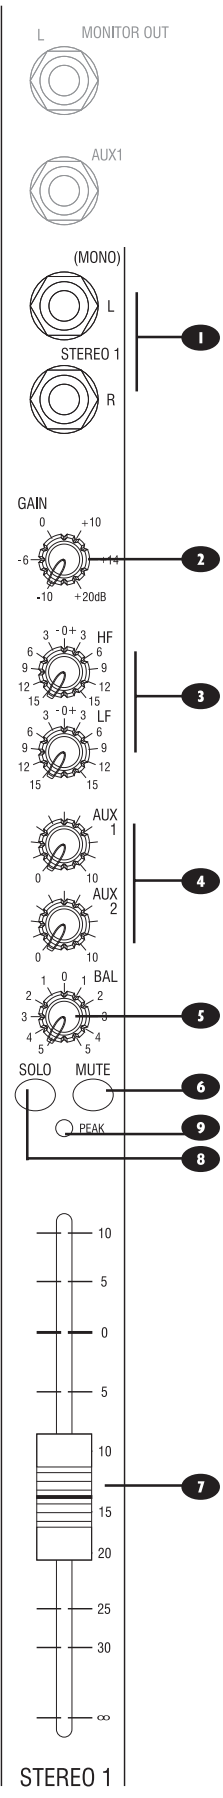

## STEREO INPUT CHANNELS

### 1 INPUTS STEREO 1/2

These inputs accept 3-pole 'A' gauge (TRS) jacks. Use these inputs for sources such as keyboards, drum machines, synths, tape machines or processing units. The inputs are BALANCED for low noise and top quality from professional equipment, but you can use UNBALANCED sources by wiring up the jacks as shown in the "Wiring it Up" section earlier in this manual, although you should then keep cable lengths as short as possible. Mono sources may be used by plugging into the left jack only.

### 2 GAIN

The GAIN control sets the level of the channel signal.

### 3 EQUALISER

#### HF EQ

Turn to the right to boost high (treble) frequencies, adding crispness to percussion from drum machines, synths and electronic instruments. Turn to the left to cut these frequencies, reducing hiss or excessive brilliance. Set the knob in the centre-detented position when not required. The control has a shelving response giving 15dB of boost or cut at 12kHz.

#### LF EQ

Turn to the right to boost low (bass) frequencies, adding extra punch to synths, guitars and drums. Turn to the left to reduce hum, boominess or improve a mushy sound. Set the knob to the centre-detented position when not required. The control has a shelving response giving 15dB of boost or cut at 60Hz.

### 4 AUX SENDS

These are used to set up a separate mixes for FOLDBACK, EFFECTS or recording, and the combination of each Aux Send is mixed to the respective Aux Output at the rear of the mixer. For Effects it is useful for the signal to fade up and down with the fader (this is called POST-FADE), but for Foldback or Monitor feeds it is important for the send to be independent of the fader (this is called PRE-FADE).

AUX SENDS 1 and 2 are both globally switchable between pre and post-fade (see master section on page 21/22). The send pots are fed with a mono sum of the L & R signals.


### 5 BALANCE

This control sets the amount of the channel signal feeding the Left and Right MIX buses, allowing you to balance the source in the stereo image. When the control is turned fully right or left you feed only that side of the signal to the mix. Unity gain is provided by the control in the centre-detented position.

### 6 MUTE

All outputs from the channel are enabled when the MUTE switch is released and muted when the switch is down.

# USER GUIDE

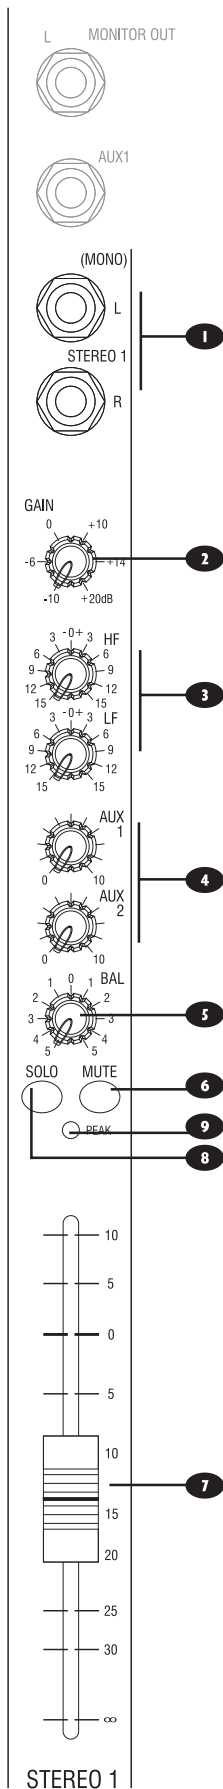

## 7 FADER

The 100mm FADER gives you smooth control of the overall signal level in the channel strip, allowing precise balancing of the various source signals being mixed to the Master Section. It is important that the input level is set correctly to give maximum travel on the fader which should normally be used at around the "0" mark. See the "Initial Setup" section on page 23 for help in setting the right level.

## 8 SOLO

When the latching SOLO switch is pressed, the pre-fade pre-mute signal is fed in mono to the headphones, control room output and meters, where it replaces the MIX. The SOLO LED on the Master section illuminates to warn that a SOLO is active. The Left and Right meters display the SOLO signal in mono. This is a useful way of listening to any required input signal without interrupting the main mix, for making adjustments or tracing problems.


## 9 CHANNEL PEAK LED

This LED will light when the signal level approaches clipping at any of the three monitored points:

- a) PRE-EQ
- b) POST-EQ
- c) POST-FADE

# SPIRIT E SERIES

## Master Section

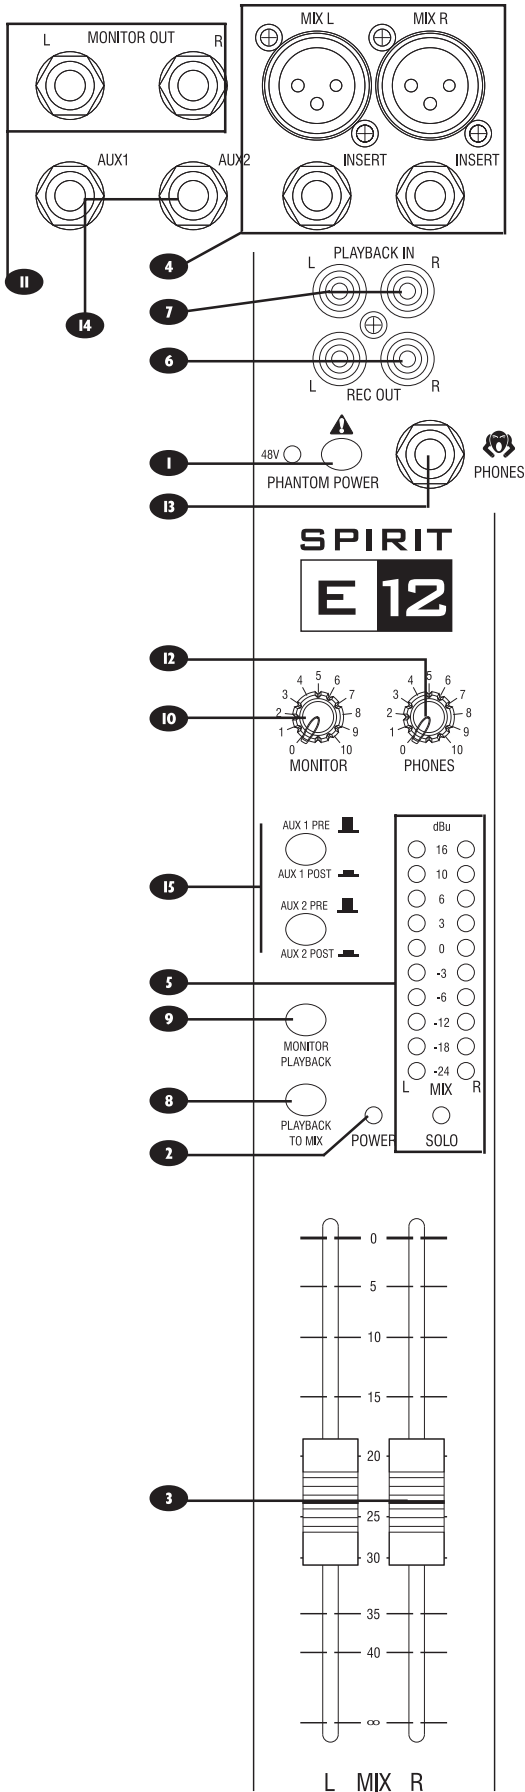

### 1 PHANTOM POWER

Many professional condenser mics need PHANTOM POWER, which is a method of sending a powering voltage down the same wires as the mic signal. Press the switch to enable the +48V power to all of the MIC inputs. The adjacent LED illuminates when the power is active.



**WARNING: TAKE CARE** when using unbalanced mics which may be damaged by the phantom power voltage. Balanced dynamic mics can normally be used with phantom power switched on (contact your microphone manufacturer for guidance).

Mics should always be plugged in, and all output faders set to minimum before switching the Phantom Power ON to avoid damage to external equipment

### 2 POWER INDICATOR

This LED lights to show when power is connected to the console.

### 3 MASTER FADERS

The MASTER FADERS set the final level of the MIX outputs, and separate faders are provided for each output. These should normally be set close to the '0' mark if the input GAIN settings have been correctly set, to give maximum travel on the faders for smoothest control.

### 4 MIX OUTPUTS & INSERTS

The Mix LEFT and RIGHT outputs are sent from the XLR sockets as balanced signals. The Mix INSERT points are on 3-pole 'A' gauge jacks and are unbalanced.

### 5 BARGRAPH METERS

The three-colour peak reading BARGRAPH METERS normally show the level of the MIX RIGHT and MIX LEFT outputs, giving you a constant warning of excessive peaks in the signal which might cause overloading. Aim to keep the signal within the amber segments at peak levels for best performance.

Similarly, if the output level is too low and hardly registering at all on the meters, the level of background noise may become significant. Take care to set up the input levels for best performance.

When any SOLO switch is pressed, the meters switch to show the selected SOLO signal on both meters, in mono; the SOLO LED also lights.


### 6 RECORD OUTPUTS

These two RCA outputs carry a copy of the MIX L and MIX R signals. They allow the use of a recording device, e.g. DAT player, Minidisc, Cassette tape recorder etc.

### 7 PLAYBACK IN

These two RCA phono sockets are unbalanced Left and Right line-level inputs, used for connecting a recording device.

# USER GUIDE

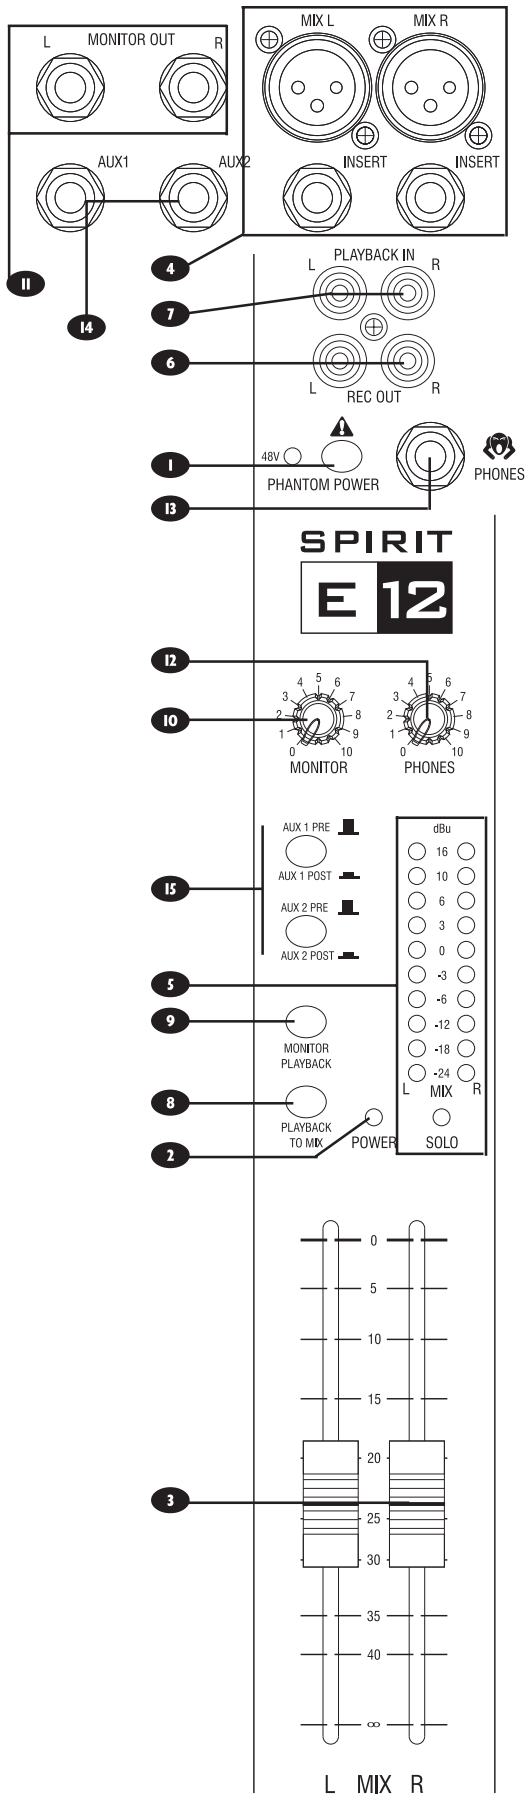

## 8 PLAYBACK TO MIX

Press this switch to route the Playback in signals, connected to the Left and Right RCA sockets 7, to the MIX Left/Right signal at the MIX outputs.

## 9 MONITOR PLAYBACK

Press this switch to route the Playback signal to the monitor and phones, overriding the default Monitor/Phones signal.

## 10 MONITOR LEVEL

This control sets the level to the MONITOR LEFT & RIGHT outputs. If headphones are plugged into the PHONES jack, the headphone level will track the Monitor Level.

## 11 MONITOR OUTPUTS

The Monitor Outputs are on 3-pole 'A' gauge jacks and are balanced connections

## 12 PHONES LEVEL

This control sets the output level to the Headphone outputs. If headphones are plugged into the PHONES jack, then the knob sets a comfortable headphone listening level without affecting the Monitor output levels.

## 13 HEADPHONES JACK

The PHONES output is a 3-pole 'A' gauge jack, wired as a stereo output as shown, ideally for headphones of 200Ω or greater. 8Ω headphones are not recommended.

## 14 AUX OUTPUTS (1 & 2)



These outputs are on 3-pole 'A' gauge jacks and are balanced outputs.

## 15 AUX PRE/POST SWITCHES

These two switches globally switch the AUX 1 and AUX 2 feeds, respectively, on all the input modules to be either pre-fade or post-fade.

## USING YOUR SPIRIT E SERIES CONSOLE

The final sound from your PA system can only ever be as good as the weakest link in the chain, and especially important is the quality of the source signal because this is the starting point of the chain. Just as you need to become familiar with the control functions of your mixer, so you must recognise the importance of correct choice of inputs, microphone placement and input channel settings. However, no amount of careful setting up can take account of the spontaneity and unpredictability of live performance. The mixer must be set up to provide “spare” control range to compensate for changing microphone position and the absorption effect of a large audience (different acoustic characteristics from soundcheck to show).

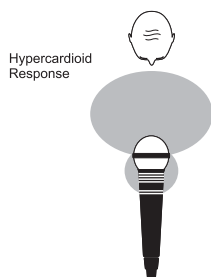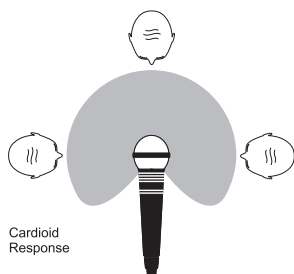

### MICROPHONE PLACEMENT

Careful microphone placement and the choice of a suitable type of microphone for the job is one of the essentials of successful sound reinforcement. The diagrams on the left show the different pick-up patterns for the most common types of microphone. Cardioid microphones are most sensitive to sound coming from in front, and hypercardioid microphones offer even greater directivity, with a small amount of pickup behind the microphone. These types are ideal for recording vocalists or instruments, where rejection of unwanted sounds and elimination of feedback is important. The aim should be to place the microphone as close as physically possible to the source, to cut out unwanted surrounding sounds, allow a lower gain setting on the mixer and avoid feedback. Also a well chosen and well placed microphone should not need any appreciable equalisation.

There are no exact rules - let your ears be the judge. In the end, the position that gives the desired effect is the correct position!

### INITIAL SETUP

Once you have connected up your system (see the sections on connection and wiring earlier in this manual for guidance) you are ready to set initial positions for the controls on your mixer.



**The front panel drawing on page 8 shows typical initial control positions which is a useful guide to setting up the mixer for the first time.**

Set up individual input channel as follows:

- Connect your sources (microphone, keyboard etc.) to the required inputs.
  - ⚠ **WARNING:** Phantom powered mics should be connected before the +48V is switched on. Ensure the PA system is OFF when switching phantom power on or off. Set Master faders at 0, input faders at 0, and set power amplifier levels to about 70%.
- Provide a typical performance level signal and press the SOLO button on the first channel, monitoring the level on the bargraph meters.
- Adjust the input gain until the meter display is in the amber section, with occasional peaks to the first red LED at a typical maximum source level. This allows sufficient headroom to accommodate peaks and establishes the maximum level for normal operation (but see note below).
- Repeat this procedure on other channels as required. As more channels are added to the mix, the meters may move into the red section. Adjust the overall level using the Master Faders if necessary.
- Listen carefully for the characteristic sound of “feedback”. If you cannot achieve satisfactory input level setting without feedback, check microphone and speaker placement and repeat the exercise. If feedback persists, it may be necessary to use a Graphic Equaliser to reduce the system response at particular resonant frequencies.



**Note:**

The initial settings should only be regarded as a starting point for your mix. It is important to remember that many factors affect the sound during a live performance, for instance the size of the audience!

# USER GUIDE

You are now ready to start building the mix and this should be done progressively, listening carefully for each component in the mix and watching the meters for any hint of overload. If this occurs, back off the appropriate Channel Fader slightly until the level is out of the red segments, or adjust the Master Faders.

Remember that the mixer is a mixer, not an amplifier. Increasing the overall level is the job of the amplifier, and if it is impossible to provide adequate level, it is probable that the amplifier is too small for the application. Choose your amplifier carefully, and do not try to compensate for lack of power by using the mixer to increase output level.




**Note:**

The level of any source signal in the final output is affected by many factors, principally the Input Gain control, Channel Fader and Mix Faders. You should try to use only as much microphone gain as required to achieve a good balance between signals, with the faders set as described above.


If the input gain is set too high, the channel fader will need to be pulled down too far in compensation to leave enough travel for successful mixing and there is a greater risk of feedback because small fader movements will have a very significant effect on output level. Also there will be a chance of distortion as the signal overloads the channel and causes clipping.

If the gain is set too low, you will not find enough gain on the faders to bring the signal up to an adequate level, and background hiss will be more noticeable.

This is illustrated below:

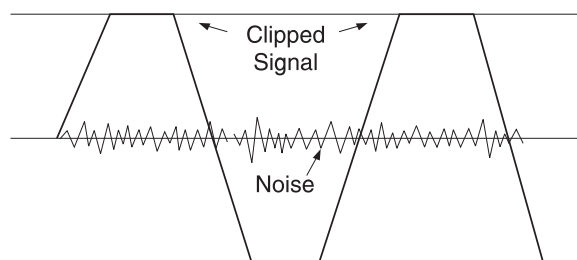

If the signal level is too high, clipping distortion may occur.



If the signal level is too low it may be masked by the noise.




# SPIRIT E SERIES

## FITTING RACKMOUNT EARS

- A** Remove screws at points **A**
- B** Remove screws at points **B** and remove side mouldings and front extrusion
- C** Attach rack ears to sides of mixer at points **C** with the new screws provided

Keep all screws and parts in case you want to re-fit them at a later date.

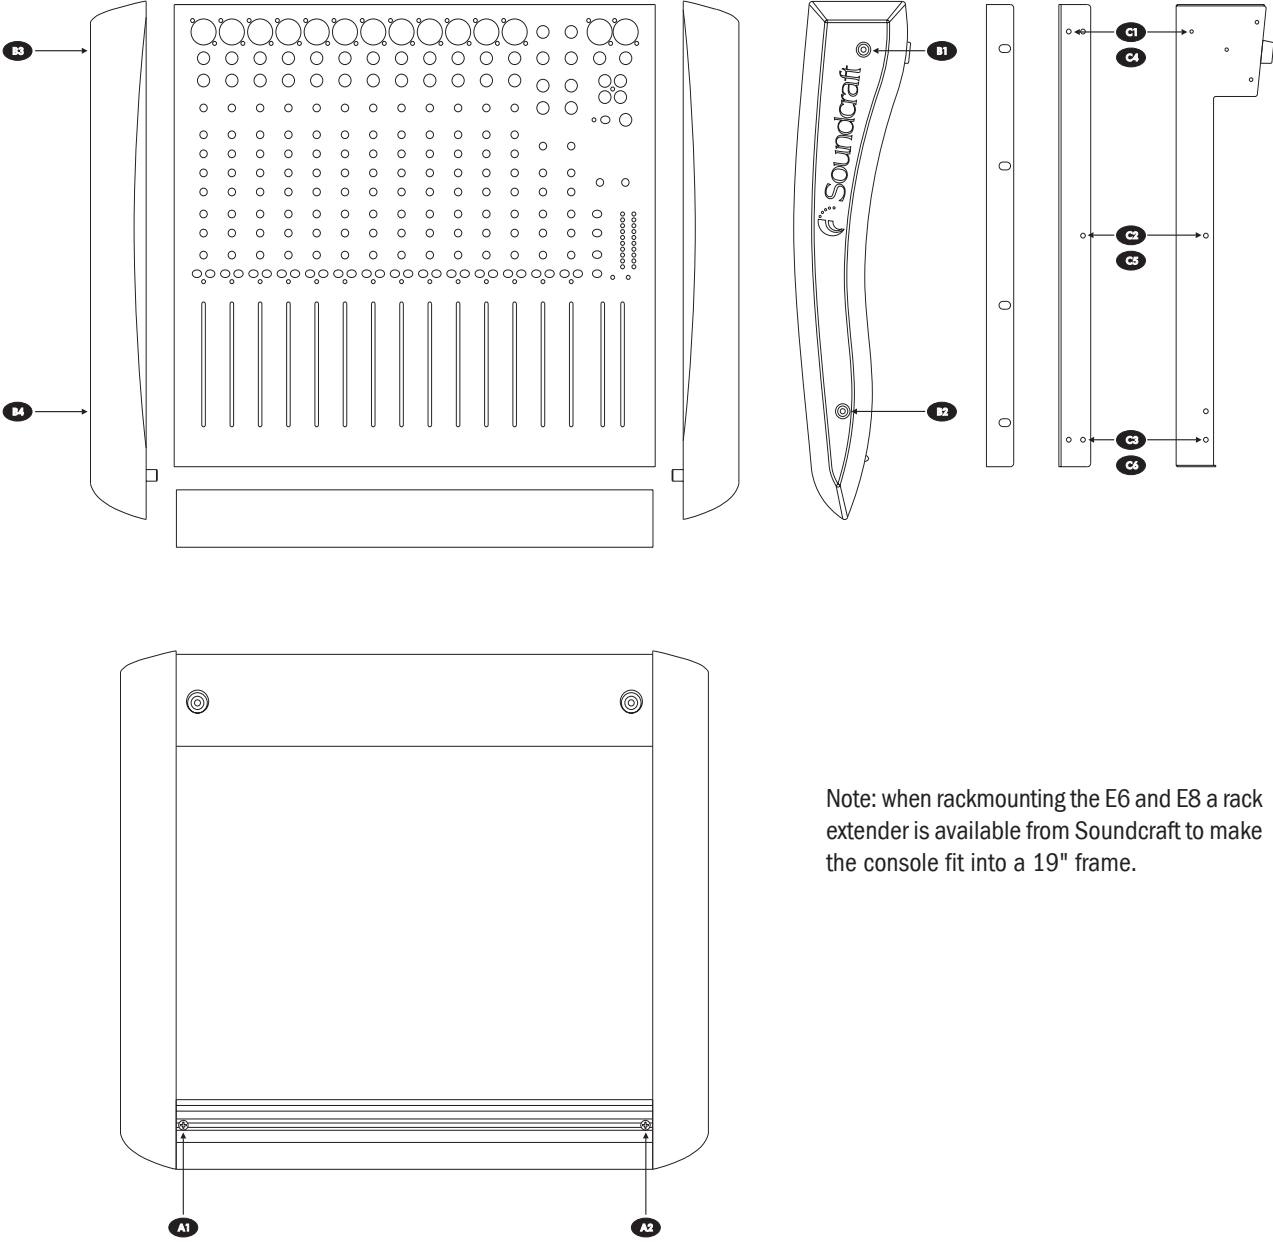


Note: when rackmounting the E6 and E8 a rack extender is available from Soundcraft to make the console fit into a 19" frame.

# USER GUIDE


## APPLICATIONS

### APPLICATION 1 - LIVE SOUND REINFORCEMENT

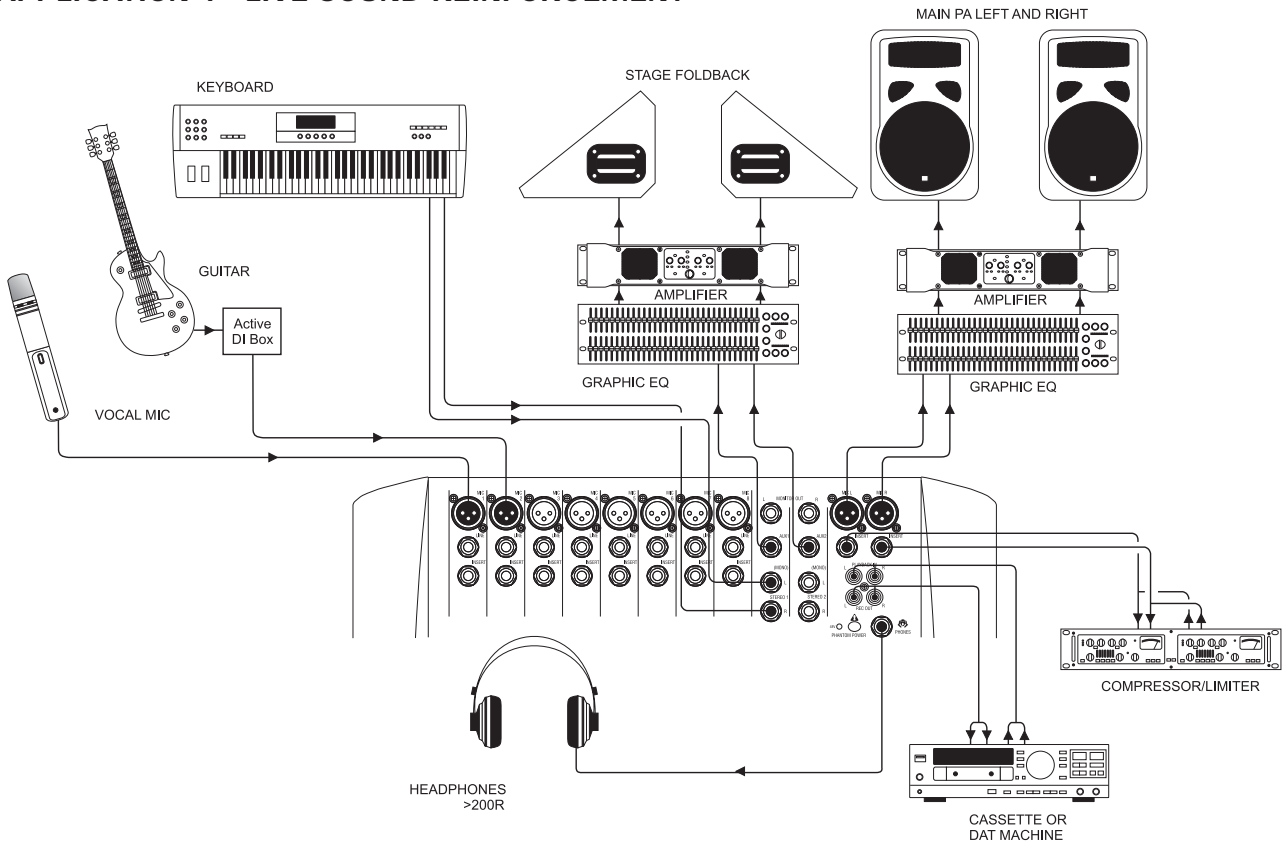

#### Using Delay in REINFORCEMENT SYSTEMS


The drawing below illustrates how to calculate delay settings for fill speakers in multiple speaker installations.

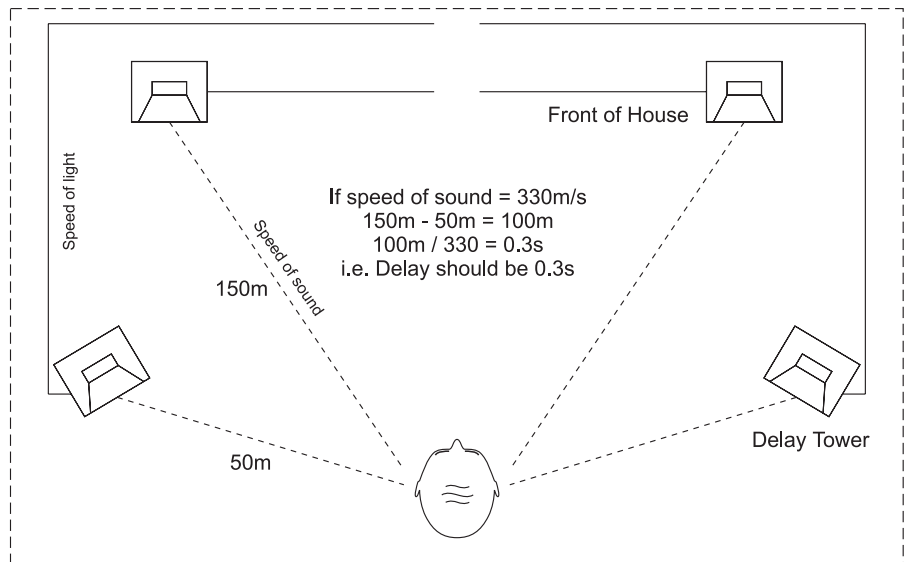

# SPIRIT E SERIES


## APPLICATION 2 - MULTISPEAKER APPLICATIONS

This configuration demonstrates how multiple speaker configurations can be driven by the Spirit E Series.

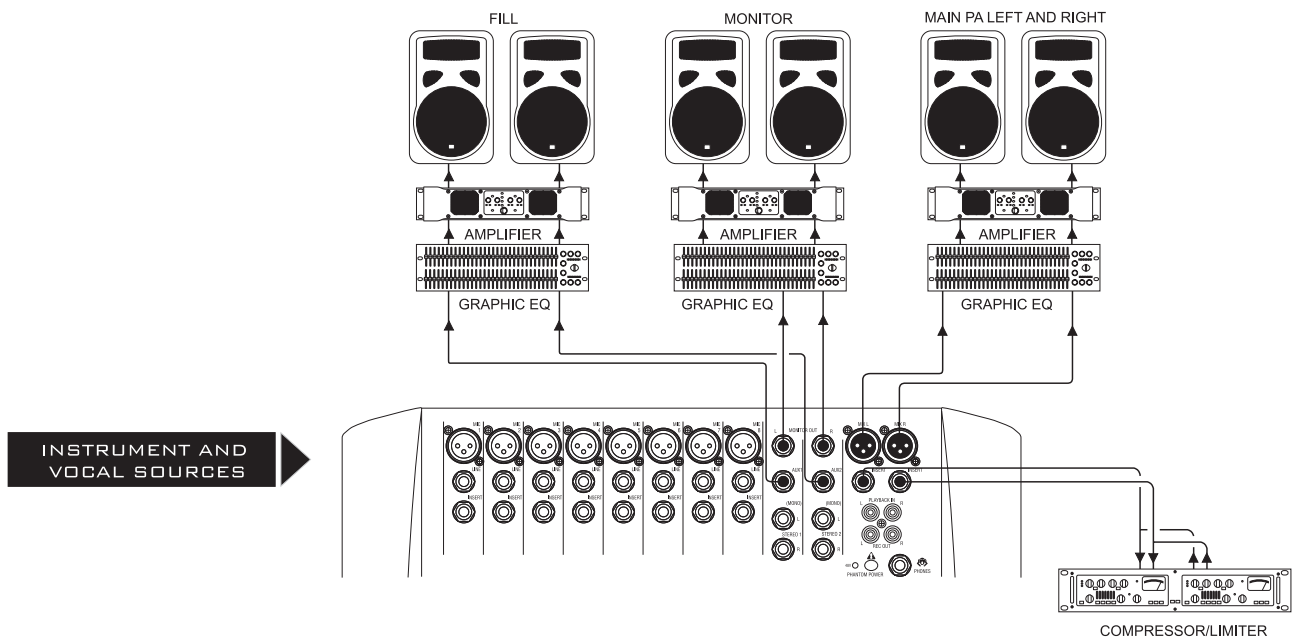

## APPLICATION 3 - PLACES OF WORSHIP


This configuration uses the Aux 2 output to drive an induction loop for the hard of hearing. Aux 1 output is used to generate foldback monitoring for the speaker/singer. The main outputs are used to drive the main speaker system. The record and playback connections are used to pass audio to and from a DAT machine or CDR.

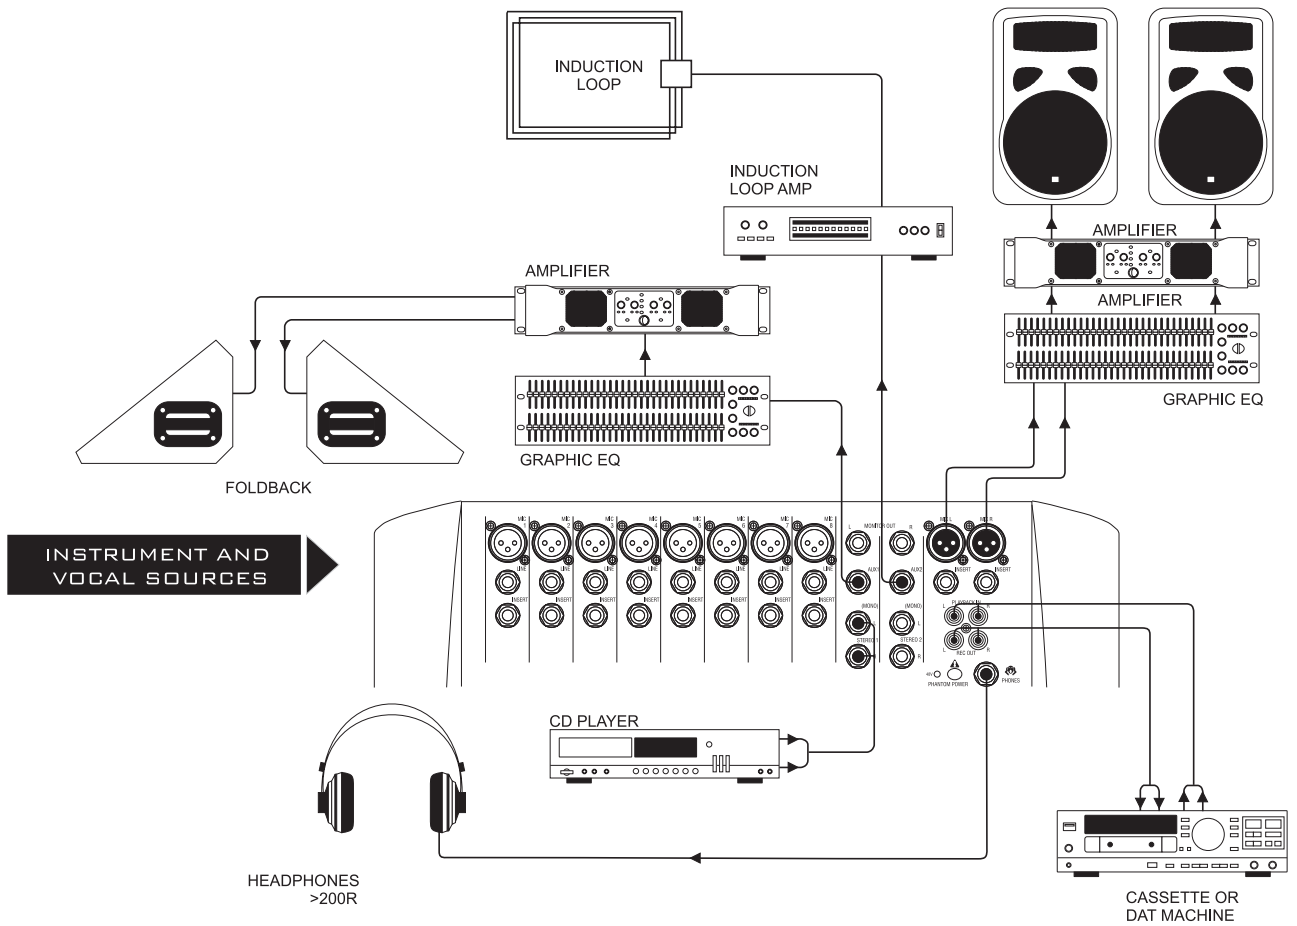


# USER GUIDE

## APPLICATION 4 - RECORDING

The insert points on channels 1-8 may be used to feed a multitrack recorder as shown (link the send and return signals). The Mix outputs are used for a preliminary stereo mix on a DAT recorder.

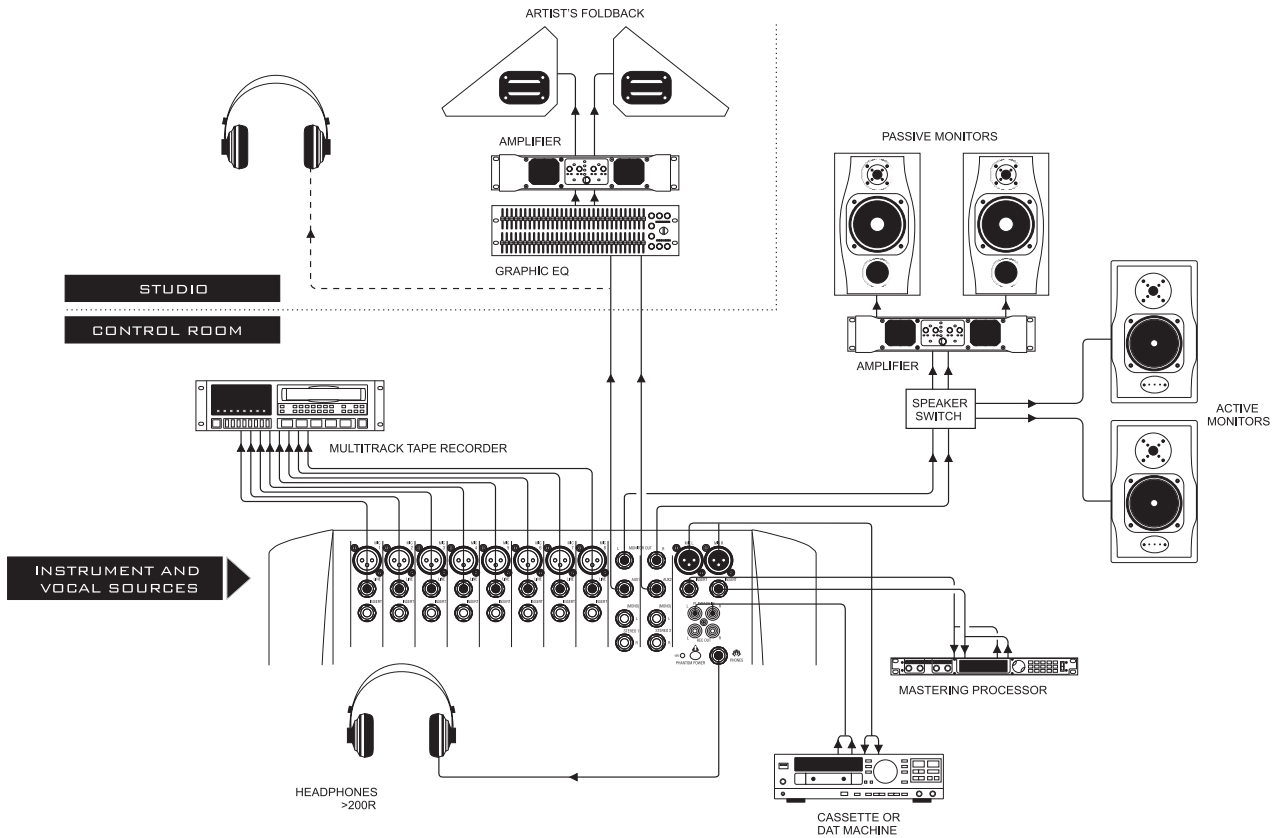

## APPLICATION 5 - LINKING TWO SPIRIT E SERIES CONSOLES

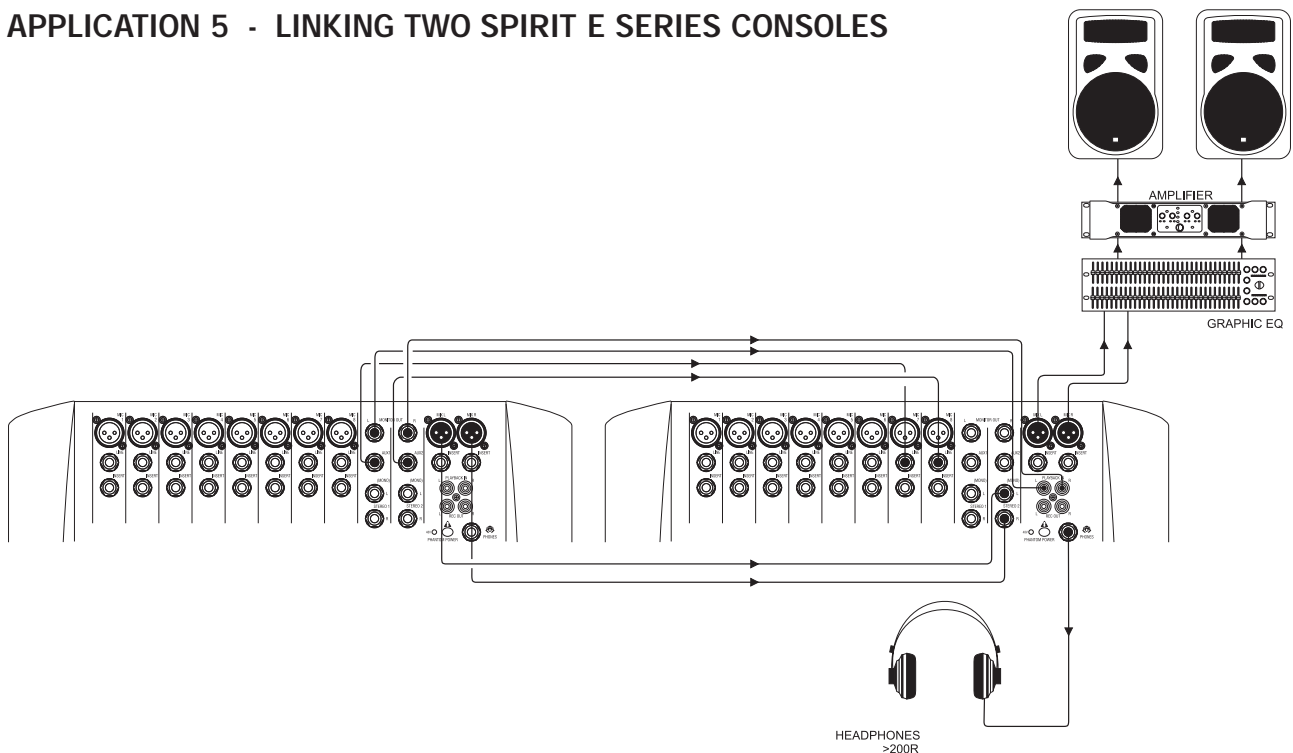

## Glossary

AFL (After Fade Listen)	a function that allows the operator to monitor the post-fade signal in a channel independently of the main mix.
auxiliary send	an output from the console comprising a mix of signals from channels and groups derived independently of the main stereo mixes.
balance	the relative levels of the left and right channels of a stereo signal.
balanced	a method of audio connection which 'balances' the wanted signal between two wires and a screen which carries no signal. Any interference is picked up equally by the two wires, which results in cancellation of the unwanted signal. In this guide, the term can refer to various circuit architectures. Connection details are given in relevant sections.
clipping	the onset of severe distortion in the signal path, usually caused by the peak signal voltage being limited by the circuit's power supply voltage.
DAT	Digital Audio Tape, a cassette-based digital recording format.
dB (decibel)	a ratio of two voltages or signal levels, expressed by the equation $dB=20\log_{10}(V1/V2)$ . Adding the suffix 'u' denotes the ratio is relative to 0.775V RMS.
DI(direct injection)/DI Box	the practice of connecting an electric musical instrument directly to the input of the mixing console, rather than to an amplifier and loudspeaker which is covered by a microphone feeding the console.
equaliser	a device that allows the boosting or cutting of selected bands of frequencies in the signal path.
fader	a linear control providing level adjustment.
feedback	the 'howling' sound caused by bringing a microphone too close to a loudspeaker driven from its amplified signal.
foldback	a feed sent back to the artistes via loudspeakers or headphones to enable them to monitor the sounds they are producing.
frequency response	the variation in gain of a device with frequency.
gain	the amount of amplification in level of the signal.
headroom	the available signal range above the nominal level before clipping occurs.
impedance balancing	a technique used on unbalanced outputs to minimise the effect of hum and interference when connecting to external balanced inputs.
insert	a break point in the signal path to allow the connection of external devices, for instance signal processors or other mixers at line level signals. Nominal levels can be anywhere between -0dBu to +6dBu, usually coming from a low impedance source.
pan (pot)	abbreviation of 'panorama': controls levels sent to left and right outputs.
peaking	the point at which a signal rises to its maximum instantaneous level, before falling back down again. It can also describe an equaliser response curve affecting only a band of frequencies, (like on a graphic equaliser), "peaking" at the centre of that band.
peak LED	a visual indication of the signal peaking just before the onset of clipping, which will distort the signal.
SOLO	a function that allows the operator to monitor the pre-fade signal in a channel independently of the main mix.

# USER GUIDE

phase	a term used to describe the relationship of two audio signals. In-phase signals reinforce each other, out-of-phase signals result in cancellation. Phase is a measurement of relative displacement between two waves of identical frequency.
polarity	a term used to describe the orientation of the positive and negative poles of an audio connection. Normally connections are made with positive to positive, negative to negative. If this is reversed, the result will be out-of-phase signals (see 'phase' above).
post-fade	the point in the signal path after the monitor or master fader and therefore affected by fader position.
pre-fade	the point in the signal path before the monitor or master fader position and therefore unaffected by the fader position.
rolloff	a fall in gain at the extremes of the frequency response.
shelving	an equaliser response affecting all frequencies above or below the break frequency i.e. a highpass or lowpass derived response.
spill	acoustic interference from other sources.
transient	a momentary rise in the signal level.
unbalanced	a method of audio connection which uses a single wire and the cable screen as the signal return. This method does not provide the noise immunity of a balanced input (see above).
+48V	the phantom power supply, available at the channel mic inputs, for condenser microphones and active DI boxes.

**TYPICAL SPECIFICATIONS**

**Noise (22Hz-22kHz measurement bandwidth)**

Mic EIN @ max gain, 150 W source impedance ..... -128dBu  
 Mix @max, faders down ..... <-85dBu

**Crosstalk (typ. @ 1kHz)**

Channel mute ..... >96dB  
 Fader cut-off (rel +10 mark) ..... >96dB  
 Aux send pot offness ..... >86dB

**Frequency response**

Mic/Line input to any output ..... +/- 0.5dB 20Hz - 20kHz

**THD+Noise**

Mic gain 30dB, -30dBu input  
 Mix out, fader max @ 1kHz ..... <0.007 %

**Input & output Impedances**

Mic input ..... 2.4kΩ  
 Line input ..... 11kΩ  
 Stereo input ..... 100kΩ  
 Outputs ..... 75Ω

**Input & output levels**

Mic input max level ..... +17dBu  
 Line input max level ..... +30dBu  
 Stereo input max level ..... +30dBu  
 Mix output max level ..... +20dBu  
 Headphones (@ 200Ω) ..... 300mW

**EQ**

EQ Bands (Mono input) +/- 15dB

Lo ..... 80Hz  
 Mid (swept) ..... 140Hz - 3kHz  
 Hi ..... 12kHz  
 Q ..... 1.5

EQ Bands (stereo input) +/- 15dB

Lo ..... 80Hz  
 Hi ..... 12kHz

# USER GUIDE

## WEIGHT

E6 .....	5.75 kg (12.68 lbs)
E8 .....	6.75 kg (14.88 lbs)
E12 .....	7.75 kg (17.09 lbs)

## AVERAGE POWER CONSUMPTION (QUIESCENT)

E6 .....	13 Watts
E8 .....	14.5 Watts
E12 .....	17 Watts




## MIN / MAX OPERATING TEMPERATURE (E SERIES FAMILY)

Centigrade / Farenheit.....	0°C - 50°C / 32°F - 122°F
-----------------------------	---------------------------







# SPiRiT E SERIES

## E6 Dimensions

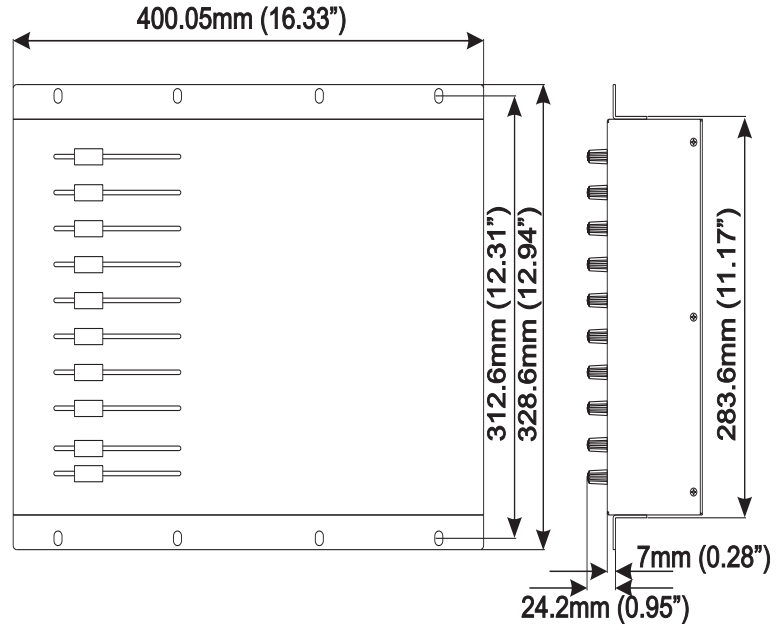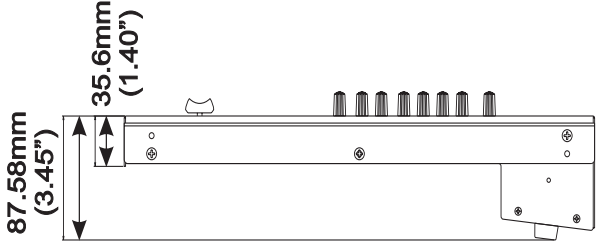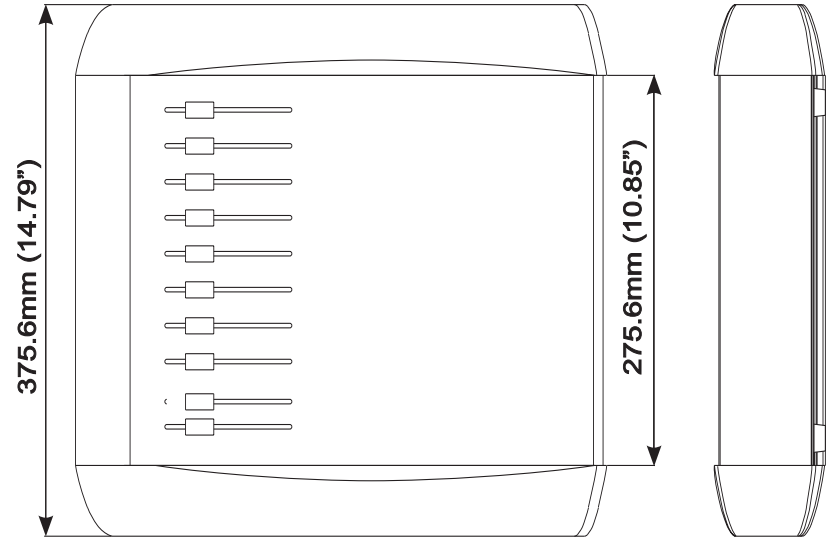


# USER GUIDE

## E8 Dimensions

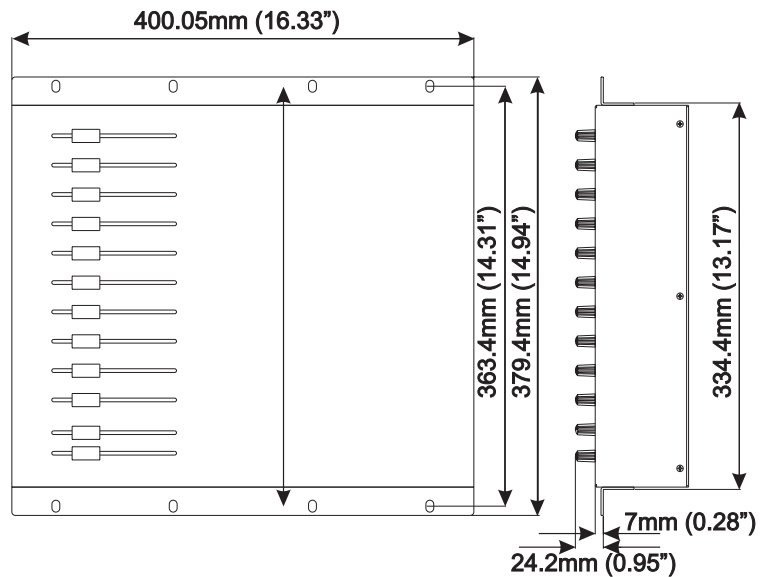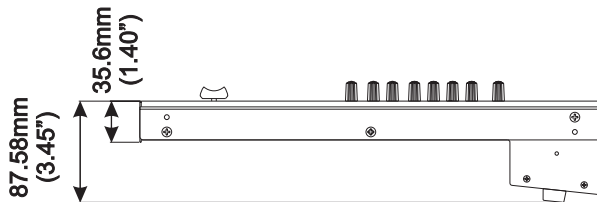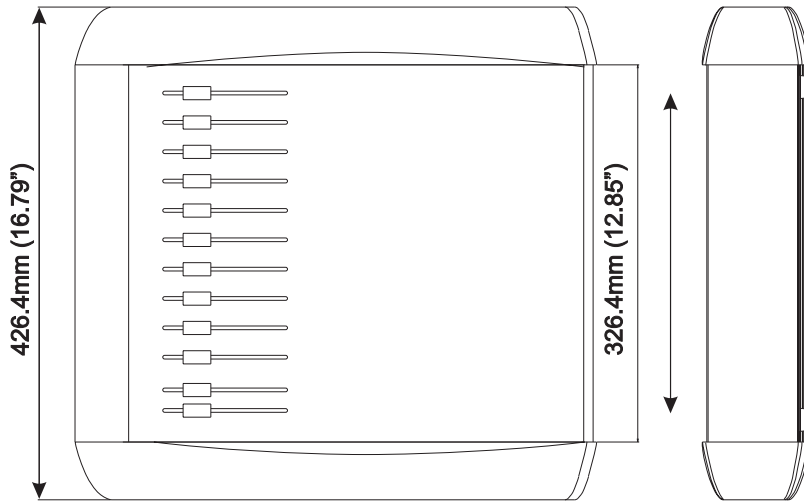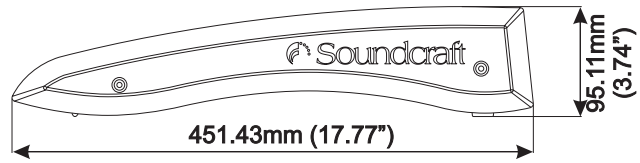

# SPIRIT E SERIES


## E12 Dimensions

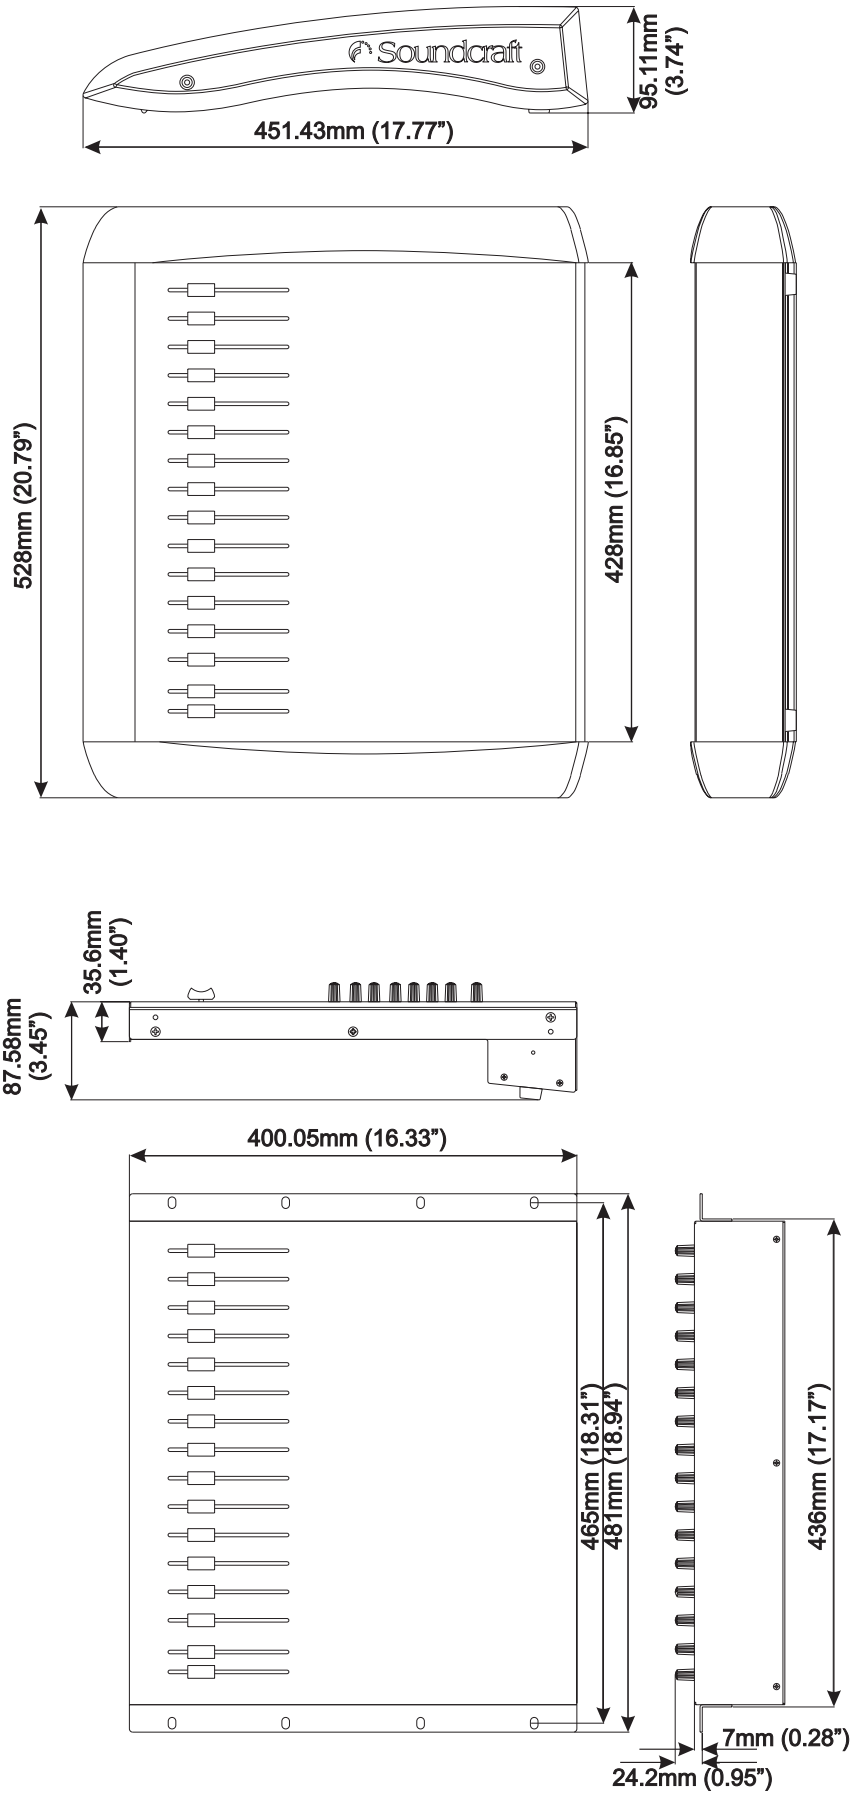


# USER GUIDE

## TYPICAL CONNECTING LEADS


Audio connectors used with Soundcraft consoles

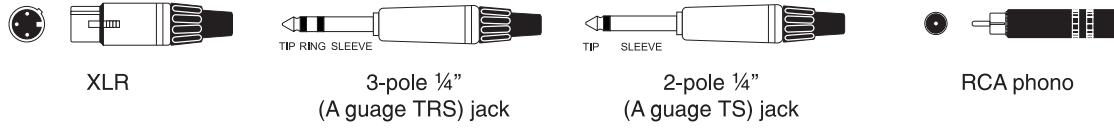


Balanced - Line Inputs, Mix L & R Outputs, Stereo Inputs, Auxiliary Outputs

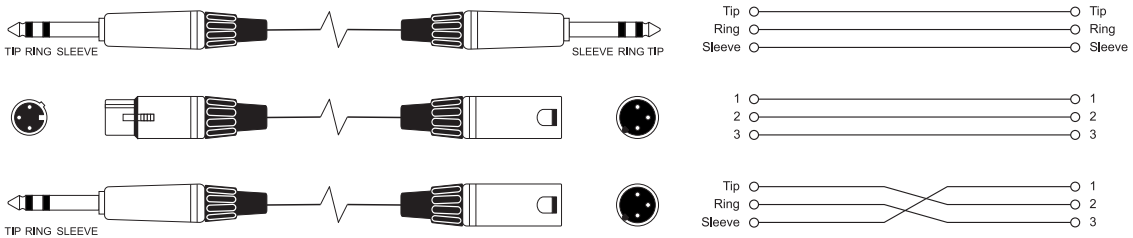

Unbalanced - Direct Output, Monitor Output, Stereo Return Inputs

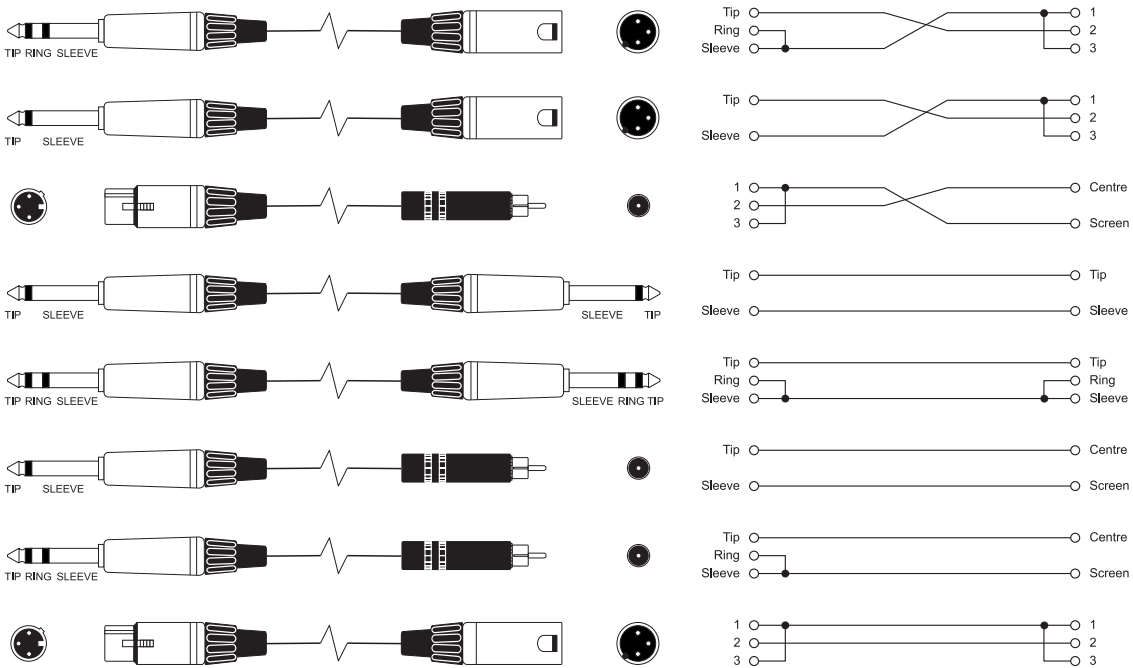


Insert Cables - Mono Inserts

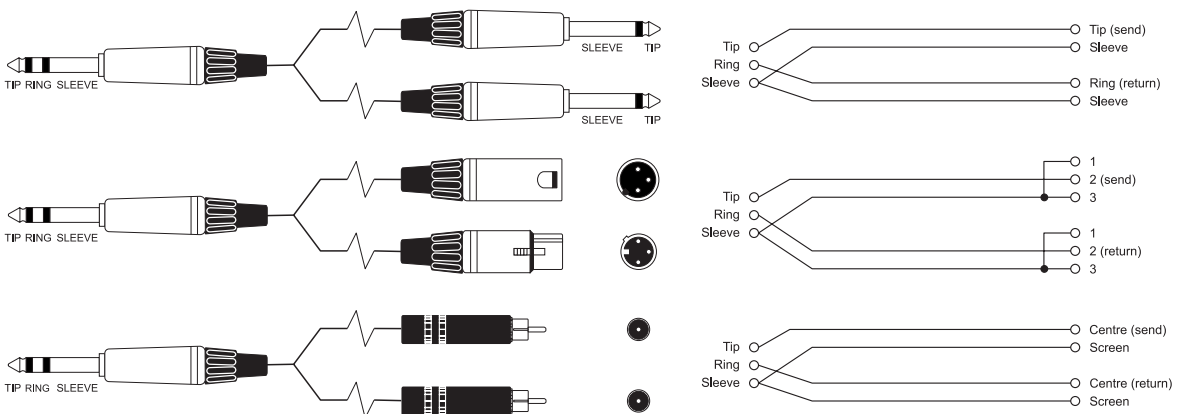


# SPIRIT E SERIES


## 'Y' Cables (Balanced) Where used ... Aux, Mix outputs

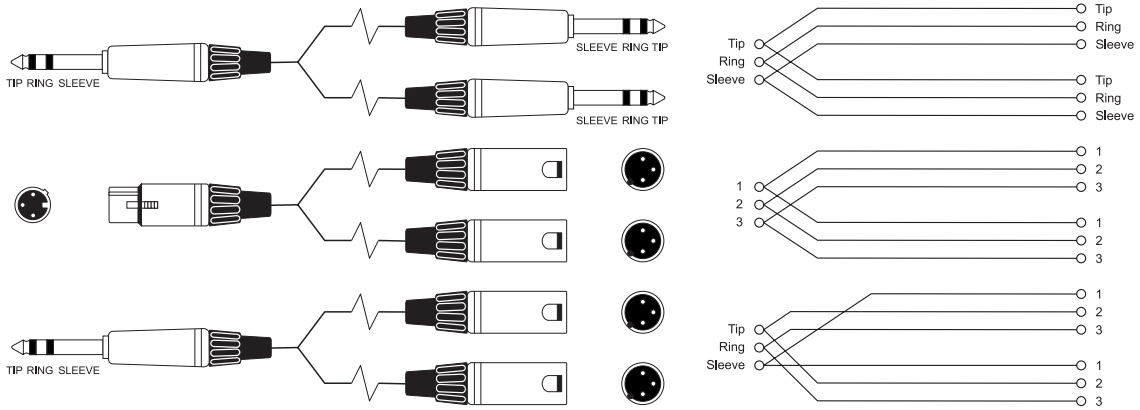

## Headphone Separator Note: for every doubling of headphones the load impedance is halved. Do not go below 200R.

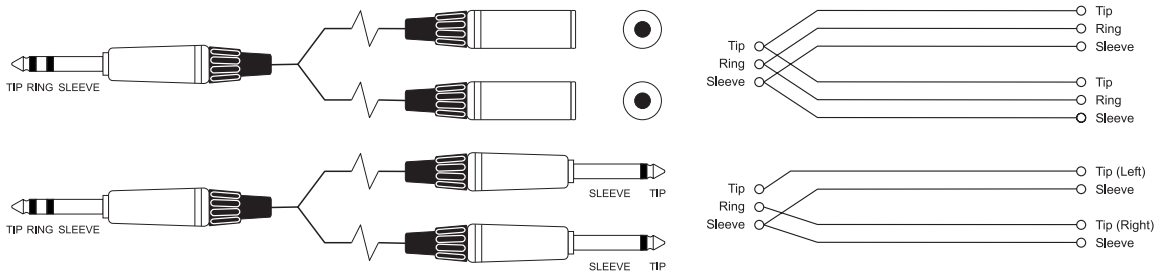


## 'Y' Cables (Unbalanced)

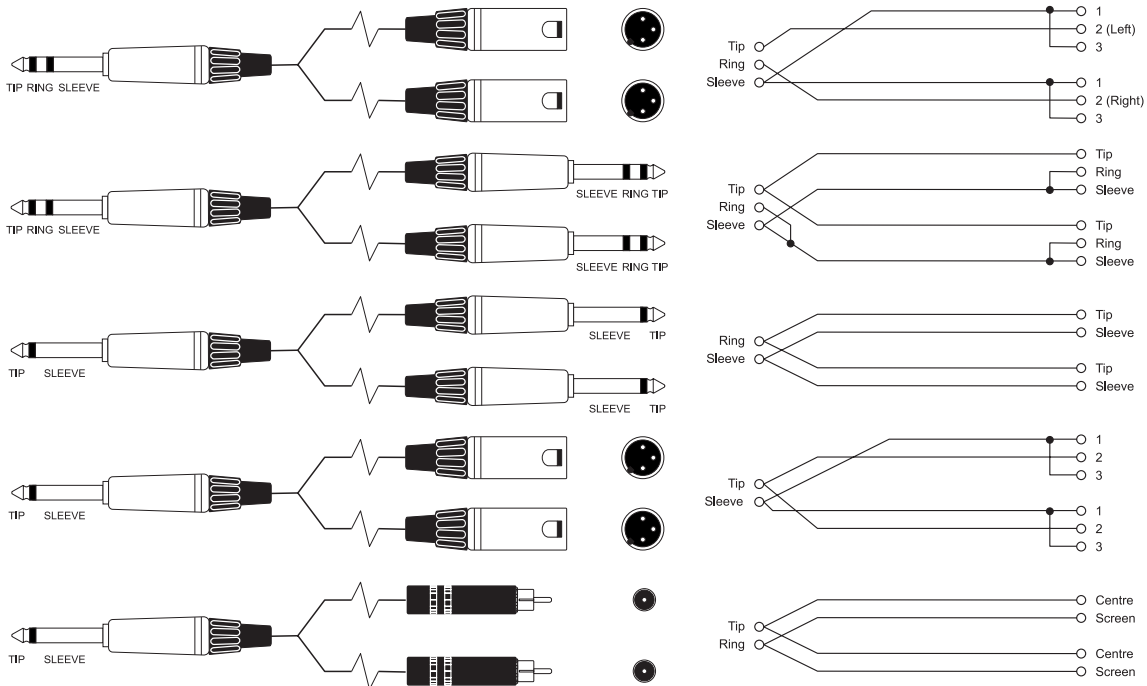

# USER GUIDE

## SYSTEM BLOCK DIAGRAM

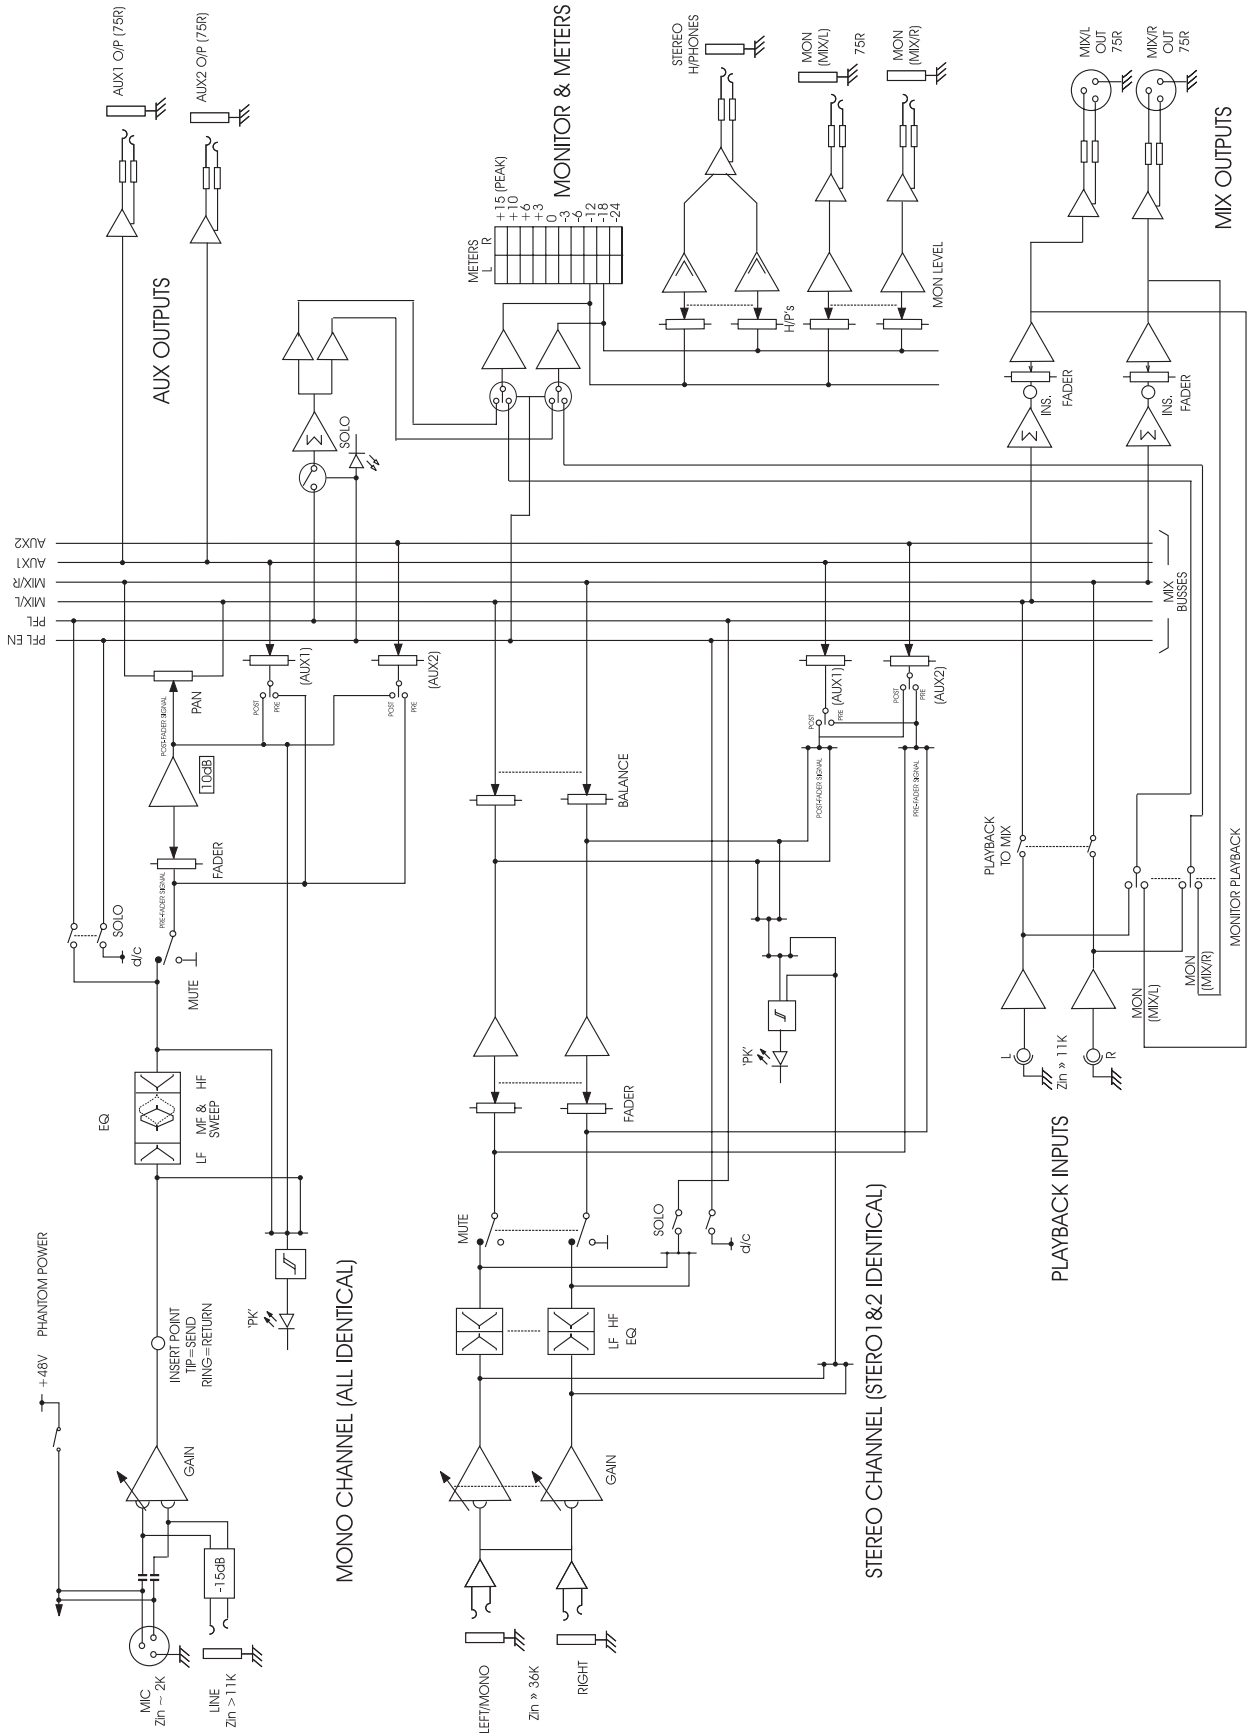

# SPIRIT E SERIES

## CONTROL POSITION MARK-UP SHEET

To assist you in restoring the console to a previous setting you may copy this sheet as many times as you like, and use the copies to make a note of your control settings.

GAIN (Line -15dB)						STEREO 1		STEREO 2	
<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK	<input type="checkbox"/> PEAK
1	2	3	4	5	6	STEREO 1	STEREO 2	L	R

48V

PHANTOM POWER

**SPIRIT E 6**

MONITOR

PHONES

AUX 1 PRE

AUX 1 POST

AUX 2 PRE

AUX 2 POST

MONITOR PLAYBACK

PLAYBACK TO MIX

POWER

SOLO

dBu

16

10

6

3

0

-3

-6

-12

-18

-24

L MIX R

# USER GUIDE

## CONTROL POSITION MARK-UP SHEET

To assist you in restoring the console to a previous setting you may copy this sheet as many times as you like, and use the copies to make a note of your control settings.

The mark-up sheet is organized into 10 vertical columns, each representing a different channel or stereo pair. Each column contains a set of control symbols and a vertical slider. The symbols include:

- Gain:** A circular symbol with a scale from +10 to -45 dB.
- HF, MID, LF:** Three-band frequency response controls, each with a circular symbol and a scale from 3 to 15.
- AUX 1, AUX 2:** Auxiliary send controls, each with a circular symbol and a scale from 0 to 10.
- PAN:** Pan control, each with a circular symbol and a scale from 1 to 5.
- SOLO, MUTE, PEAK:** Solo, mute, and peak indicators, each with a circular symbol.

The STEREO 1 and STEREO 2 columns also include:

- BAL:** Balance control, each with a circular symbol and a scale from 1 to 5.

The L MIX R column includes:

- MONITOR, PLAYBACK, POWER, SOLO:** Monitor, playback, power, and solo indicators, each with a circular symbol.

At the bottom of each column is a vertical slider with a scale from 0 to infinity (∞). The Spirit E8 logo is located in the center-right area of the sheet.


Soundcraft




# SPIRIT E SERIES


## CONTROL POSITION MARK-UP SHEET

To assist you in restoring the console to a previous setting you may copy this sheet as many times as you like, and use the copies to make a note of your control settings.




48V  
PHANTOM POWER






MONITOR  
PHONES

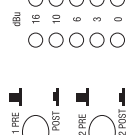

AUX PRE  
AUX POST  
AUX 2 PRE  
AUX 2 POST

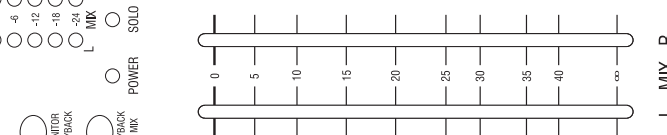

MONITOR  
PLAYBACK  
SOLO  
MUTE  
PEAK  
POWER  
PANBACK  
TO MIX  
MIX  
R  
L  
STEREO 1  
STEREO 2  
MIX R

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

GAIN (Line-15dB)

HF

MID

140/30kHz

LF

AUX 1

AUX 2

PAN

SOLO

MUTE

PEAK

10

5

0

5

10

15

20

25

30

35

40

∞

# USER GUIDE